



# Parts Manual DM-Trac 215 Comfort (+)



## Parts Manual DM-Trac 215C (+) version 1.1

Drost Machines BV  
Utrechtsestraatweg 204  
3911 TX RHENEN

**Ordering parts:**

 
 
 
Tel: 0031 317 619017 (choice 2)

E-mail: [parts@nimos.nl](mailto:parts@nimos.nl)

Website: [www.nimos.nl](http://www.nimos.nl)



|           |                                          |           |
|-----------|------------------------------------------|-----------|
| <b>1</b>  | <b>Cabin 1102 .....</b>                  | <b>4</b>  |
| 1.1       | Interior .....                           | 4         |
|           | 6                                        |           |
| 1.2       | Explode view cabin .....                 | 8         |
| 1.3       | Air condition .....                      | 11        |
|           | Air conditioning system - .....          | 13        |
|           | - .....                                  | 14        |
| 1.4       | Steering Column.....                     | 15        |
| 1.5       | Command Arm.....                         | 17        |
| 1.6       | Exterior .....                           | 19        |
| <b>2</b>  | <b>Hydraulics.....</b>                   | <b>21</b> |
| 2.1       | Pumps .....                              | 21        |
| 2.2       | Functions Implement and Front-lift ..... | 23        |
| 2.3       | PTO Implement .....                      | 25        |
| 2.4       | Steering System .....                    | 27        |
| 2.5       | Driving System .....                     | 29        |
| <b>3</b>  | <b>Reservoirs and Cooling.....</b>       | <b>31</b> |
| 3.1       | Hydraulic-oil tank .....                 | 31        |
| 3.2       | Oil-Cooler .....                         | 33        |
| 3.3       | Fuel tank and Battery .....              | 35        |
| <b>4</b>  | <b>Engine compartment .....</b>          | <b>37</b> |
| <b>5</b>  | <b>Chassis .....</b>                     | <b>43</b> |
| 5.1       | Chassis Front and Front-lift .....       | 43        |
| 5.2       | Chassis Rear.....                        | 47        |
| 5.3       | Chassis back .....                       | 49        |
| 5.4       | A-Frame.....                             | 51        |
| <b>6</b>  | <b>Options .....</b>                     | <b>53</b> |
| <b>7.</b> | <b>Fast Moving Parts.....</b>            | <b>56</b> |

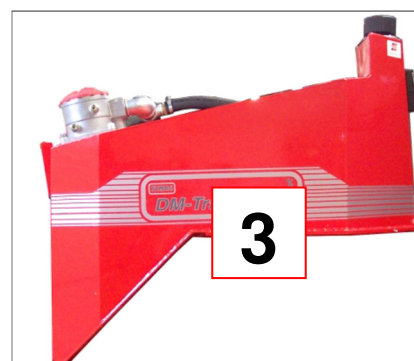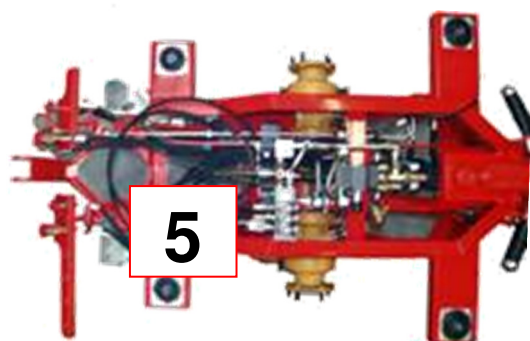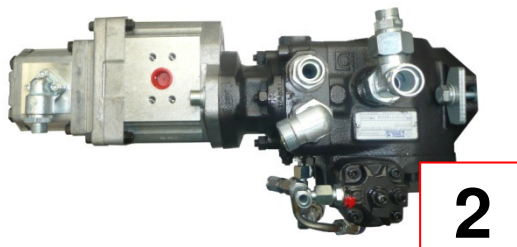



### 1 Cabin 1102

#### 1.1 Interior

14-9952



40-0924



 
14-3023-1



14-3012

14-3025

14-2742

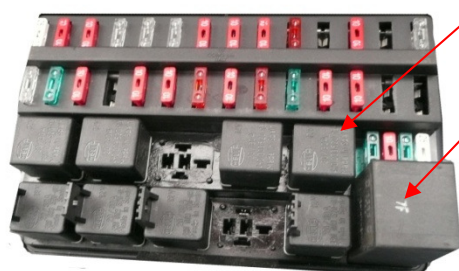

16-1513

16-9957




| Part code | Description                    |
|-----------|--------------------------------|
| 14-2742   | Screen-washer pump + tank      |
| 14-3009   | Seat, mech. suspended ,        |
| 14-3025   | Arm rest seat (L and R)        |
| 14-9952   | Driving pedal DM-Trac (double) |
| 40-0924   | Anti-slide rubber              |
| 14-3013   | Air suspended seat Maximo XL   |
| 14-3013-1 | Arm rest R Maximo XL           |
| 14-3013-2 | Arm rest L Maximo XL           |
| 14-3014   | Air suspended seat Maximo XXL  |
| 14-3014-1 | Arm rest R Maximo XXL          |
| 14-3014-2 | Arm rest L Maximo XXL          |
| 14-3023   | Air suspended seat M98/MT      |
| 14-3023-1 | Arm rest R in command arm MT   |
| 16-1513   | Relay                          |
| 16-9957   | Direction indicator relay      |
| 16-4227   | Fuse 10A                       |
| 16-4230   | Fuse 25A                       |
| 16-4231   | Fuse 30A                       |



14-0968


14-0970

 16-9907

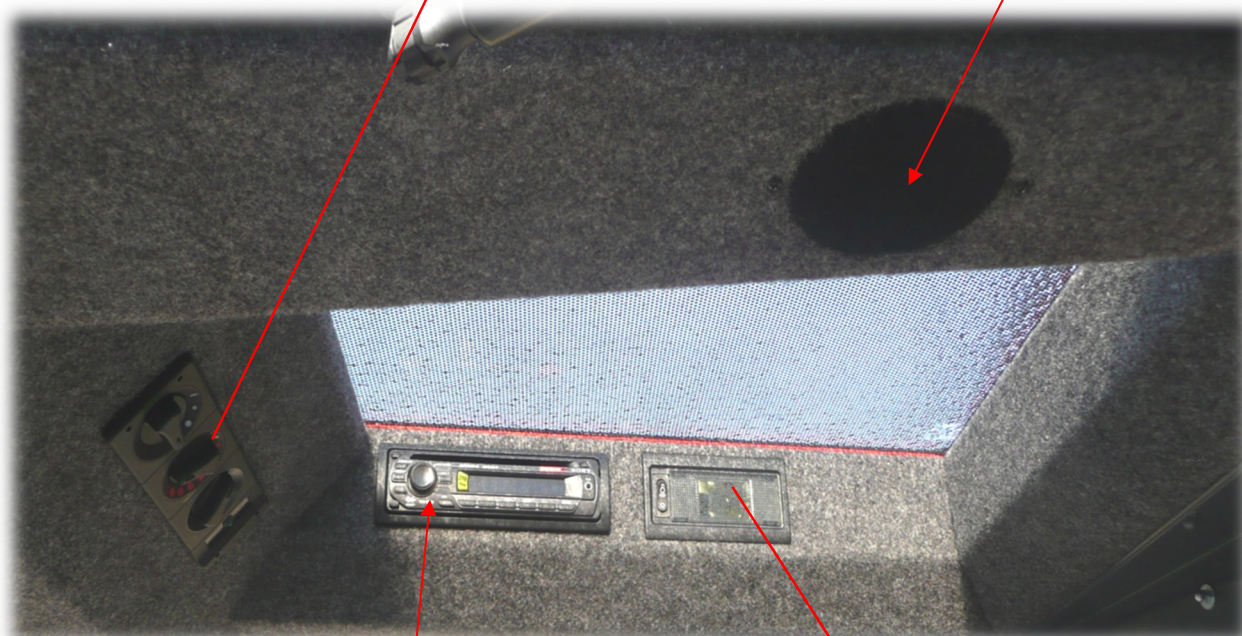

14-9908

 16-0669

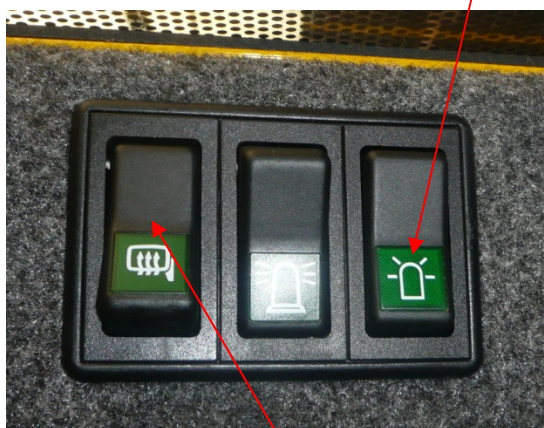

14-0665




14-9937




| <b>Part code</b> | <b>Description</b>                              |
|------------------|-------------------------------------------------|
| 14-0968          | Control panel air conditioning/heater with lamp |
| 14-9937          | Cabin lighting                                  |
| 16-9907          | Speakers 40W 2-way                              |
| 16-9908          | Radio-CD-player                                 |



### 1.2 Explode view cabin

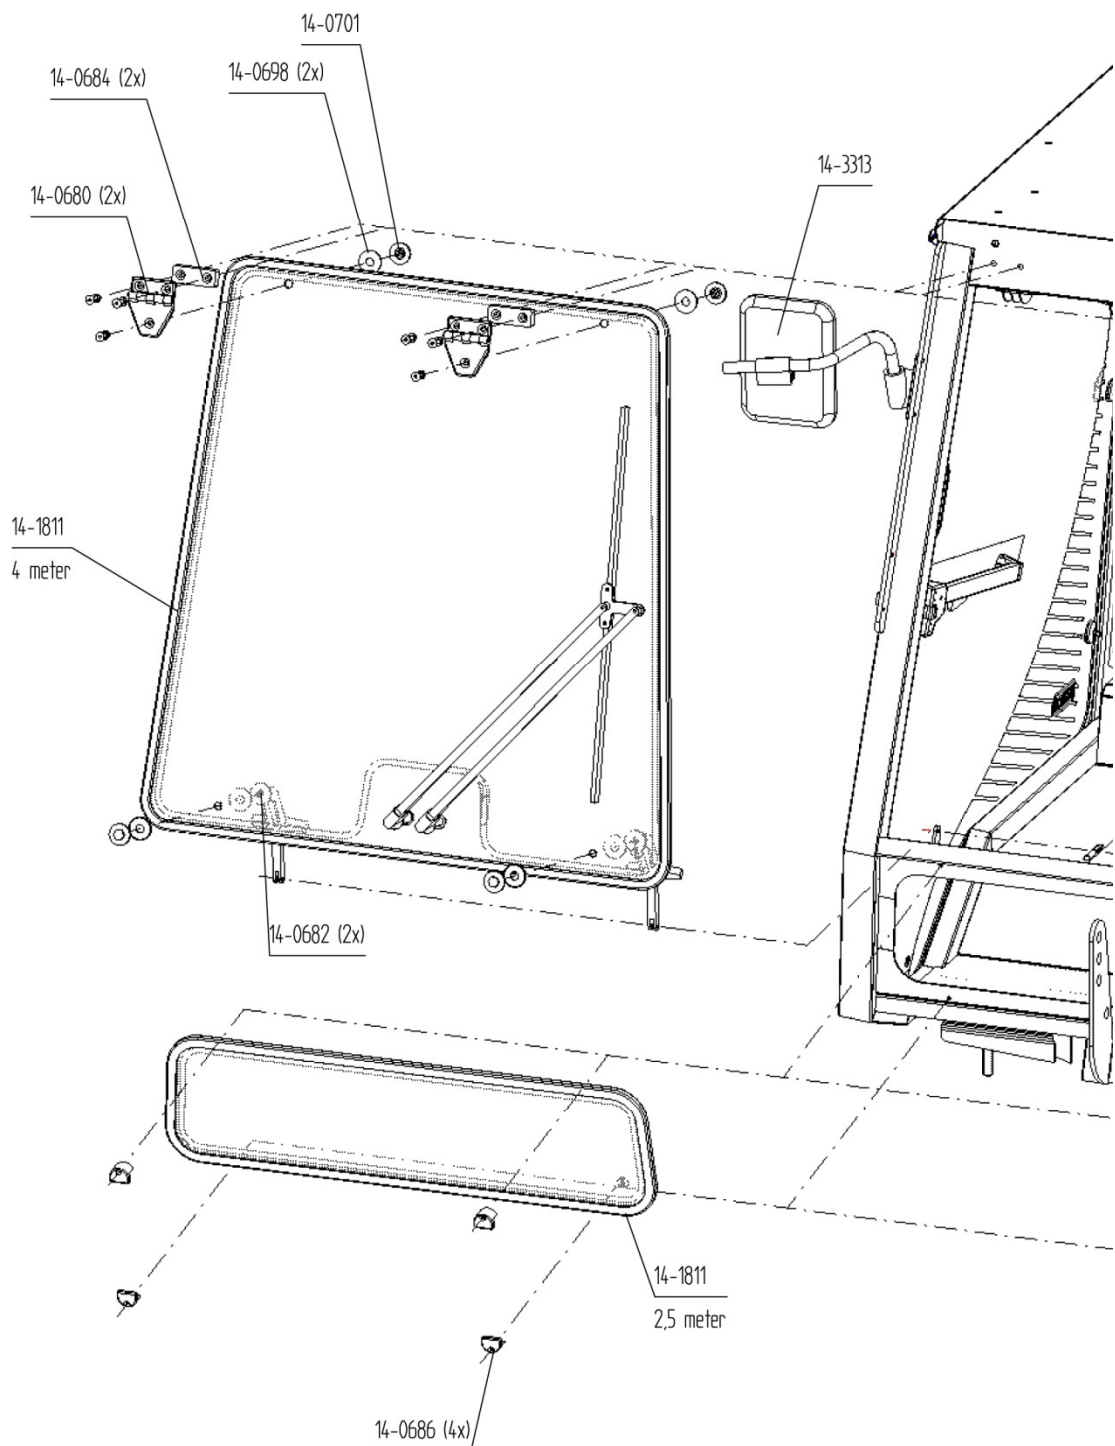 

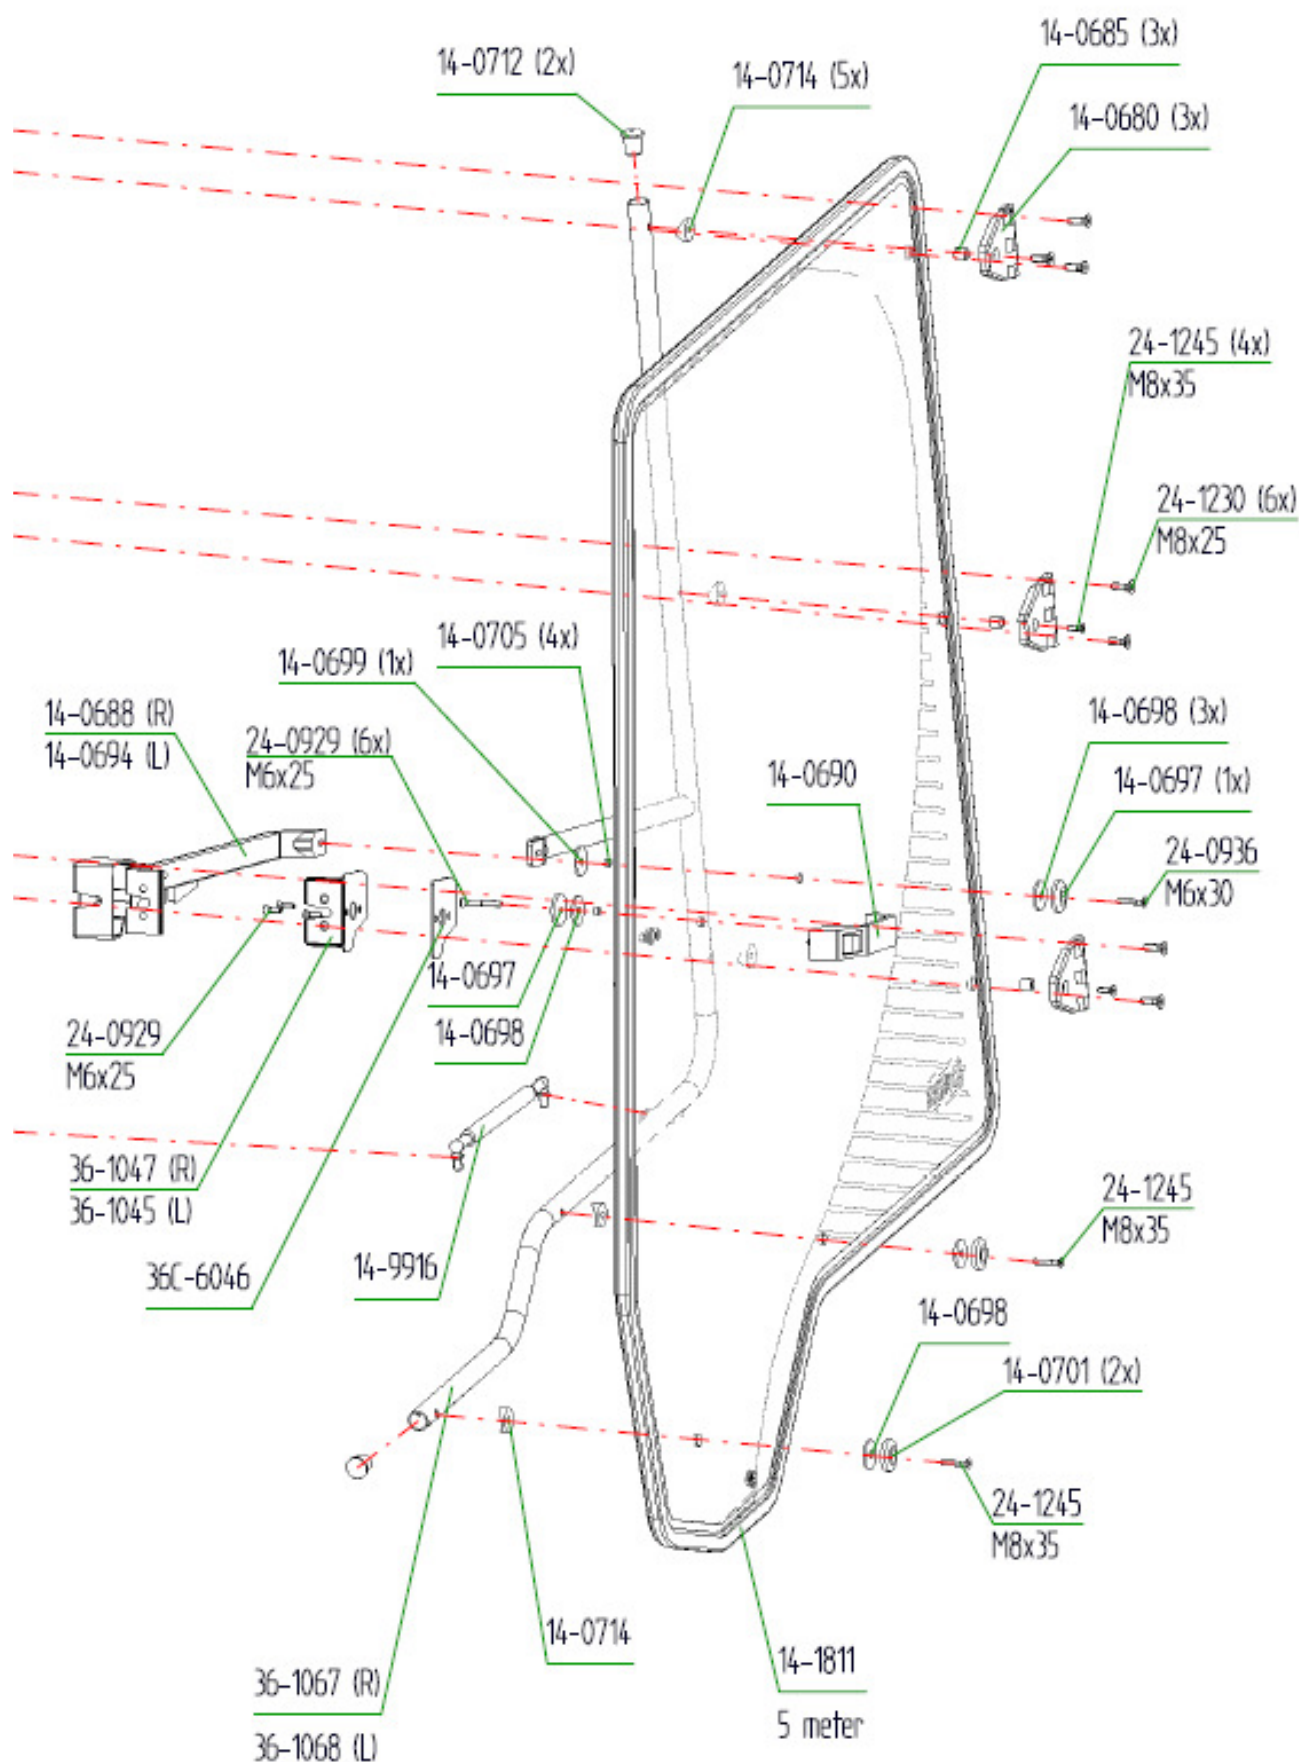 




| <b>Part code</b> | <b>Description</b>              |
|------------------|---------------------------------|
| 14-0680          | Plastic hinge                   |
| 14-0684          | Distance plate plastic          |
| 14-0685          | Distance bush                   |
| 14-0686          | Lock position                   |
| 14-0688          | Right door handgrip             |
| 14-0690          | Handgrip outdoor L or R         |
| 14-0691          | Screen door lock barrel         |
| 14-0692          | Door lock barrel                |
| 14-0694          | Left door handgrip              |
| 14-0695          | Assist grip                     |
| 14-0697          | Plastic ring 6                  |
| 14-0698          | rubber ring for window          |
| 14-0699          | Rubber ring for window          |
| 14-0703          | Plastic ring with hex           |
| 14-0705          | Distance bush                   |
| 14-1811          | Surround seal weather-strip     |
| 14-2415          | Ventilation breather            |
| 14-2420          | Air ventilation grid            |
| 14-2706          | Wiper motor                     |
| 14-2718          | Front-screen wiper              |
| 14-2739          | Wiper blade                     |
| 14-2748          | Screen washer nozzle            |
| 14-9916          | Gas spring                      |
| 14-3312          | Outside mirror with arm L       |
| 14-3312A         | Outside mirror arm L (only arm) |
| 14-3313          | Outside mirror with arm R       |
| 14-3313A         | Outside mirror arm R (only arm) |
| 14-3314          | Outside mirror (only mirror)    |
| 16-2148          | Rotation lamp flexible          |
| 16-2150          | Rotation lamp flexible LED      |
| 16-2170          | Heat light R                    |
| 16-2172          | Heat lamp L                     |
| 28-0334          | Tinted window front             |
| 28-0337          | Tinted window front under       |
| 28-0635          | Tinted window back R            |
| 28-0637          | Tinted window back L            |
| 28-0958          | Tinted window door R            |
| 28-0959          | Tinted window door L            |



### 1.3 Air condition

 16-1524

16-1530

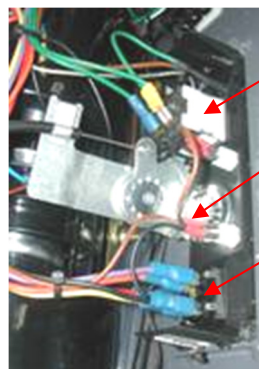

14-1224

 
14-0968

14-0931

16-9902

14-0965

14-1202

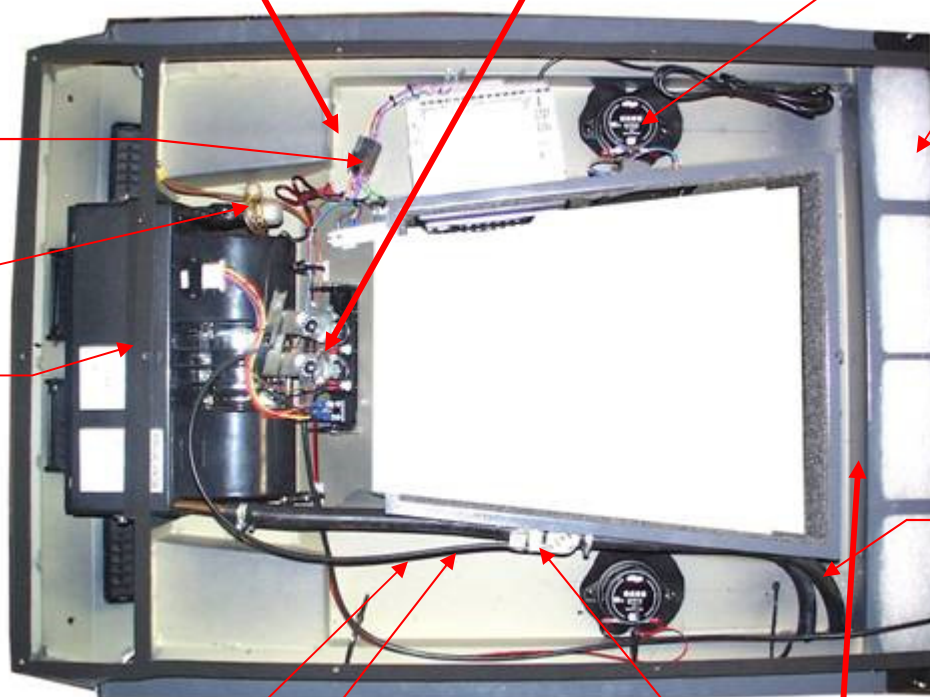

16-9907

 
46-9948

20-3036

18-0302

18-0301

14-1215

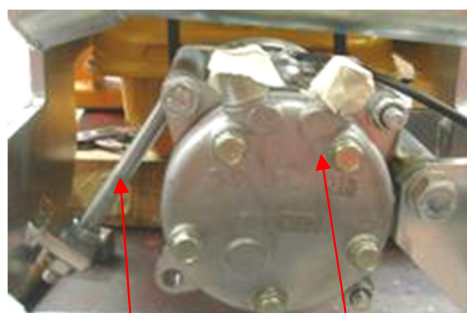

36C-6024

14-1208



14S-1228



14-1211


14-1237



| Part code | Description                                                  |
|-----------|--------------------------------------------------------------|
| 14-0965   | Expansion valve                                              |
| 14-0968   | Switch panel                                                 |
| 14-0931   | Switch for blower 3 pos                                      |
| 14-1202   | Heater DM-Trac 205                                           |
| 14-1208   | Airco compressor                                             |
| 14-1211   | dehydrator                                                   |
| 14-1215   | Heater valve                                                 |
| 14S-1228  | radiator                                                     |
| 14-1224   | Temperature switch air-co                                    |
| 14-1237   | Pressure sensor                                              |
| 16-1524   | Relay 12V 4-pole (switch over)                               |
| 16-1530   | Holder relay and clip                                        |
| 16-9902   | ISO connector (Radio)                                        |
| 16-9907   | Speakers 40W 2-way                                           |
| 18-0301   | Cable (inside) 1,5mm (heater)                                |
| 18-0302   | Cable (outside) 1,5mm (heater)                               |
| 20-0638   | Air filter cabin 1102 (two peaces are needed for filtration) |
| 20-3036   | Water hose 16mm                                              |
| 36C-6024  | Compressor tension member                                    |



### Air conditioning system

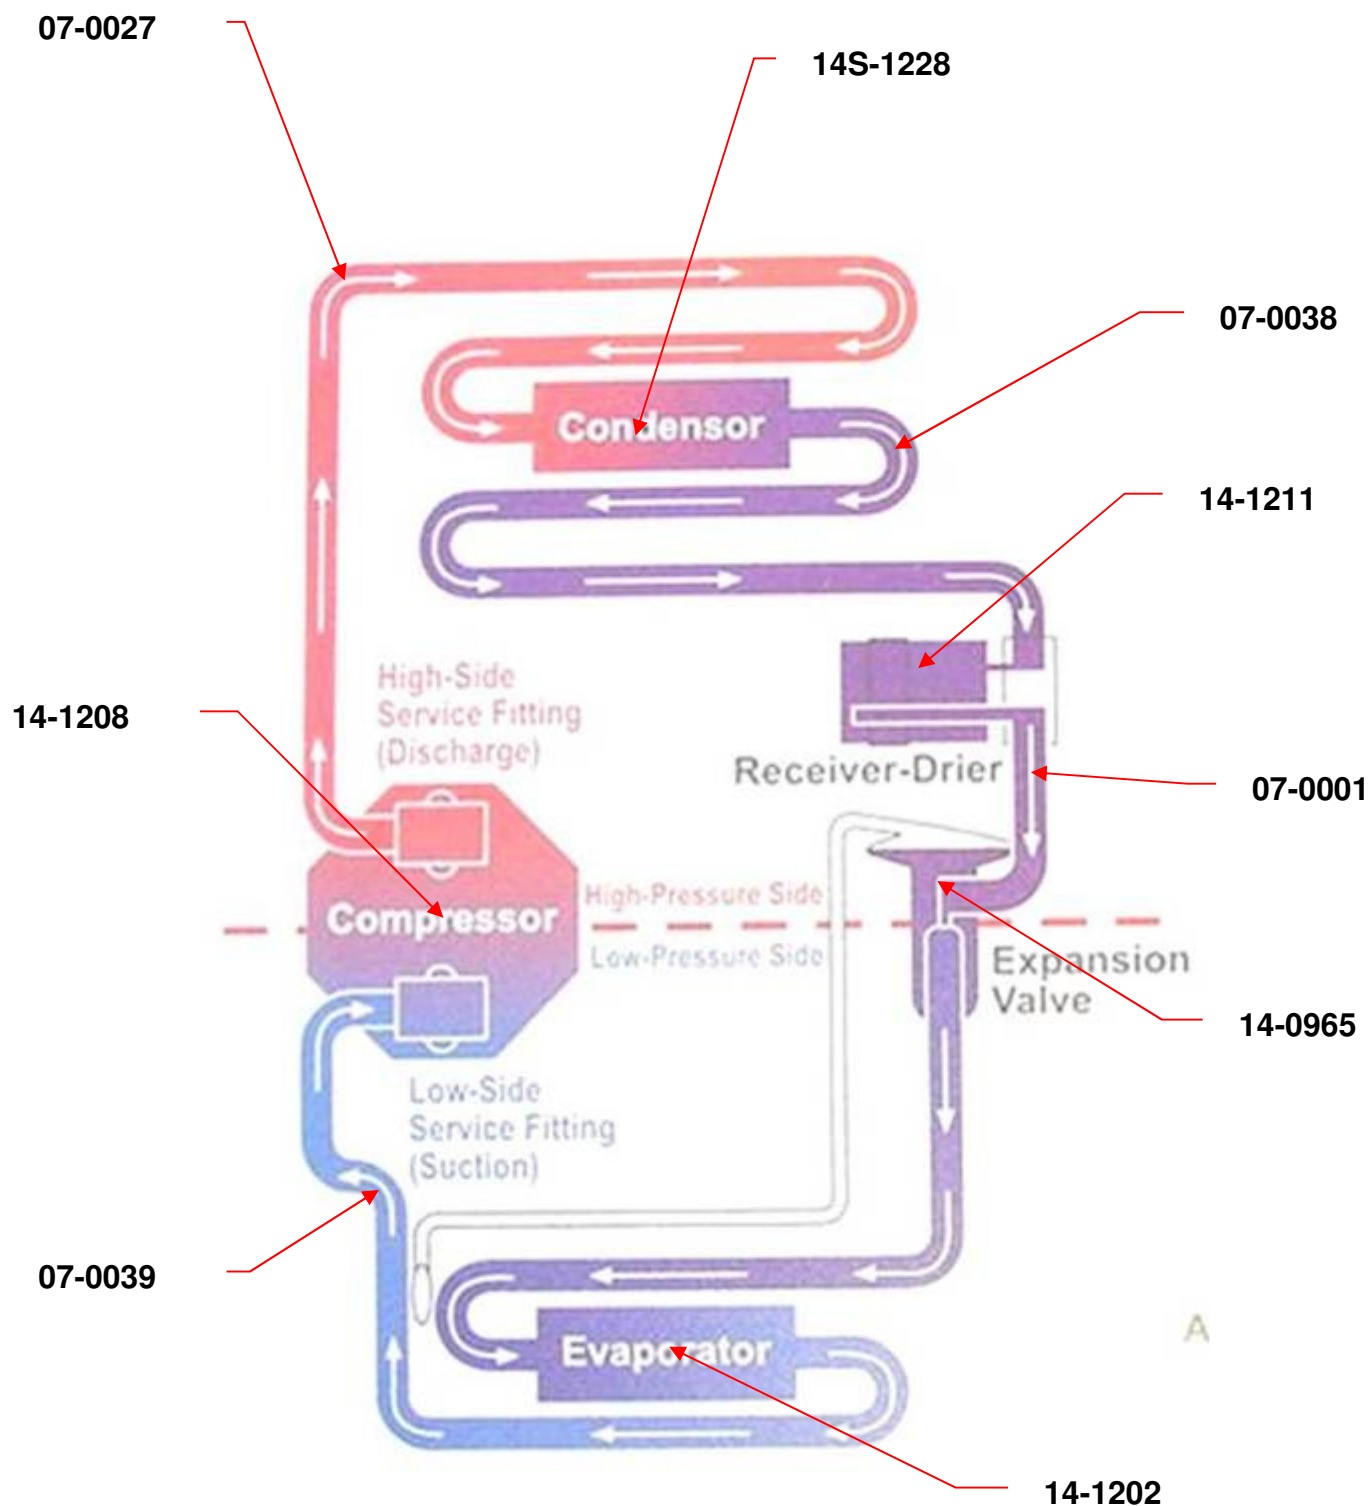 




| <b>Part code</b> | <b>Description</b>       |
|------------------|--------------------------|
| 07-0001          | Air-co hose A1           |
| 07-0027          | Air-co hose A27          |
| 07-0025          | Air-co hose A38          |
| 07-0026          | Air-co hose A39          |
| 14-0965          | Expansion valve          |
| 14-1202          | Heater DM-Trac 205       |
| 14-1208          | Air-co compressor        |
| 14-1211          | Receiver-drier           |
| 14S-1228         | Condenser                |
| 20-1533          | V-Belt Air-co Compressor |
| 10-0401          | Sealing ring 6           |
| 10-0403          | Sealing ring 8           |
| 10-0405          | Sealing ring 10          |



### 1.4 Steering Column

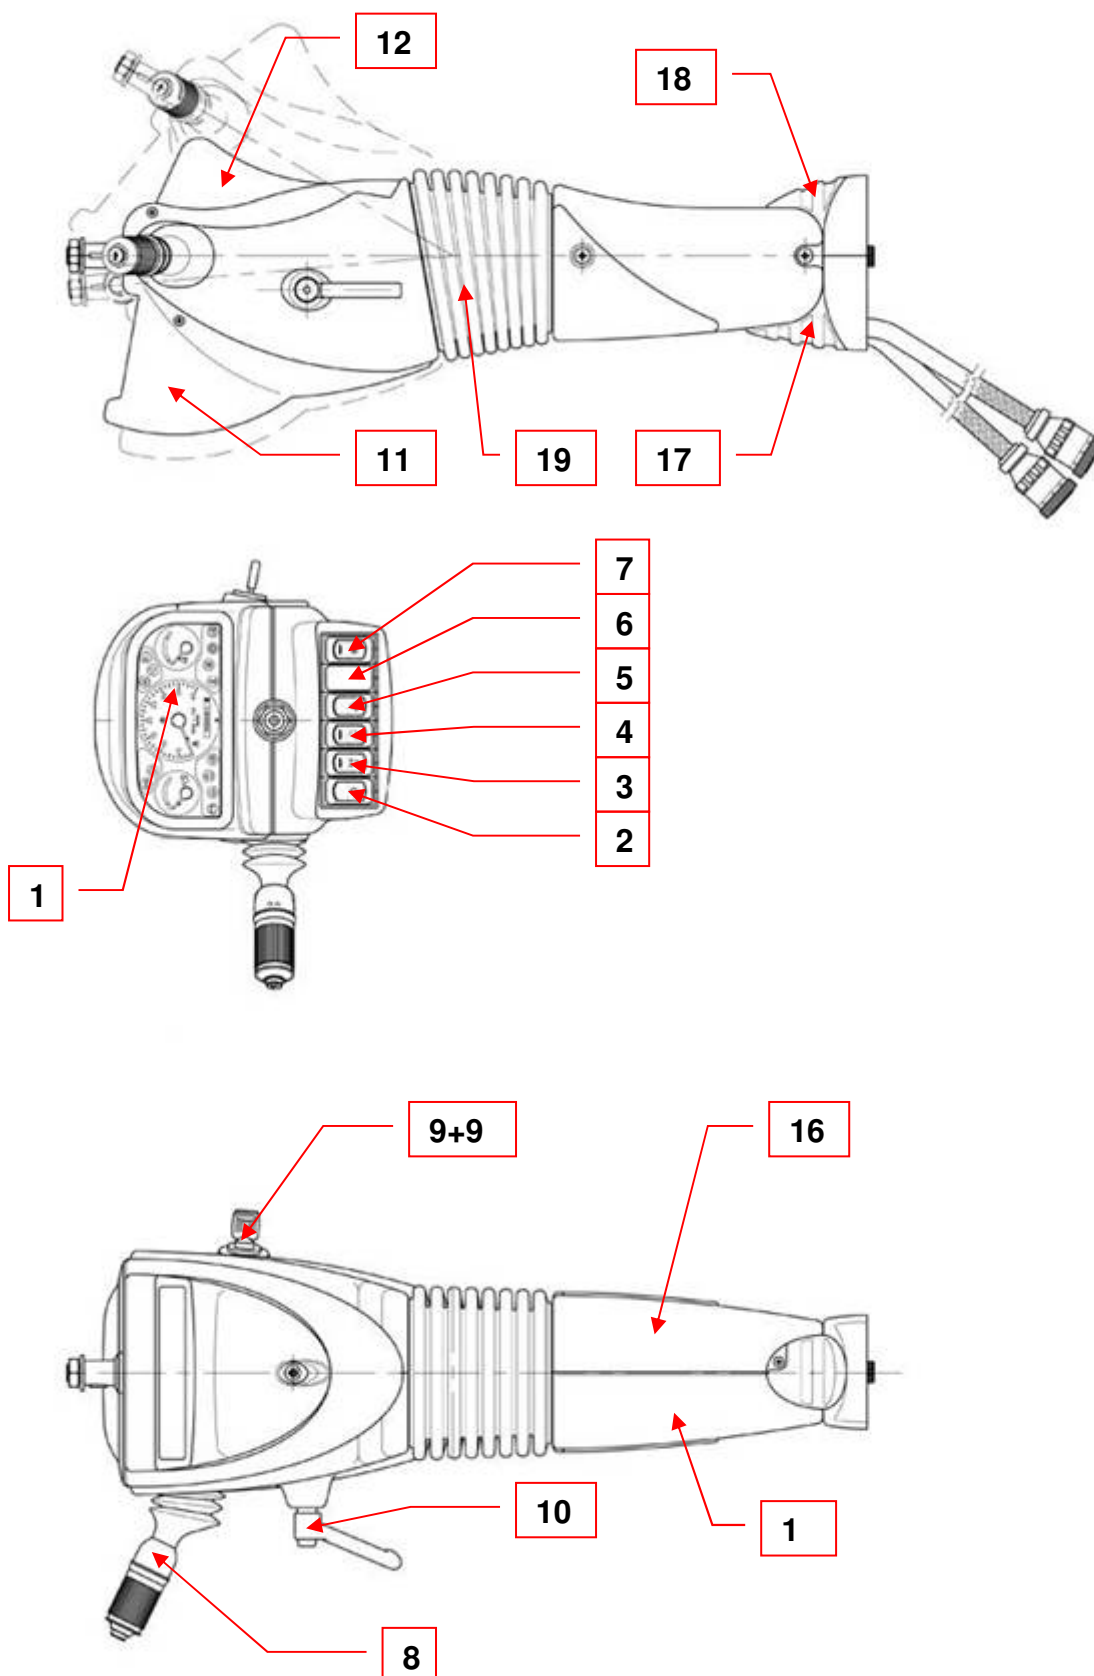 



| No | Partcode | Disription                               |
|----|----------|------------------------------------------|
|    | 16-2803  | Steering column (Complete)               |
| 1  | 16-2804  | Meter unit                               |
| 2a | 16-2805  | Switch Road light                        |
| 2b | 16-2806  | Knob for switch                          |
| 2c | 16-2807  | Bracket for switch                       |
| 3a | 16-2808  | Switch Rotating light                    |
| 3b | 16-2809  | Knob for switch                          |
| 3c | 16-2810  | Bracket for switch                       |
| 4a | 16-2811  | Switch working light                     |
| 4b | 16-2812  | Knob for switch                          |
| 4c | 16-2810  | Bracket for switch                       |
| 5a | 16-2814  | Switch hazard light                      |
| 5b | 16-2815  | Knob for switch                          |
| 5c | 16-2810  | Bracket for switch                       |
| 6a | 16-2817  | Blind                                    |
| 6b | 16-2810  | Bracket for switch                       |
| 7a | 16-2819  | Switch Parking brake                     |
| 7b | 16-2820  | Knob for switch                          |
| 7c | 16-2807  | Bracket for switch                       |
| 8  | 16-2822  | Combi switch turning light, washer, horn |
| 9  | 16-2802  | Inanition switch                         |
| 9a | 16-2801  | Ignition key                             |
| 10 | 16-2823  | Steering-column lock                     |
| 11 | 16-2824  | Plastic cover top rear                   |
| 12 | 16-2825  | Plastic cover top front                  |
| 13 | 16-2826  | Plastic cover left                       |
| 14 | 16-2827  | Plastic cover right                      |
| 15 | 16-2828  | Plastic cover left bottum                |
| 16 | 16-2829  | Plastic cover right bottum               |
| 17 | 16-2830  | Plastic cover bottum                     |
| 18 | 16-2831  | Plastic cover bottom                     |
| 19 | 16-2832  | Rubber flexible                          |
| 20 | 16-2833  | Wiring for column                        |
|    | 16-2838  | Cable connector for switches             |
| 21 | 16-2839  | 37 pin connector (chassis mount)         |
| 22 | 16-2840  | 37 pin connector (cable mount)           |



### 1.5 Command Arm

16-1534  
14-9901  
14-9902  
14-9903  
14-9904

16-0669

16-0942

16-0659

16-0960

16-0957

16-0661



16-0643

16-0672

18-0606

16-0659

 
16-06




16-1552

16-1530

16-1524

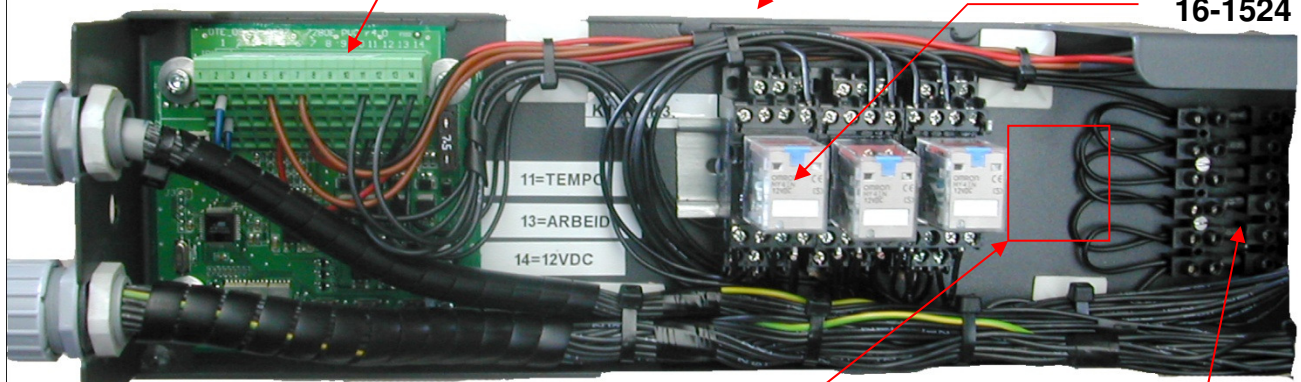

16-1516

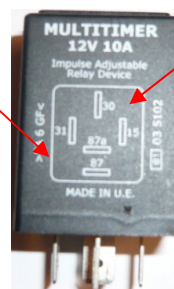 

16-9953



| Partcode | Disription                       |
|----------|----------------------------------|
| 16-0606  | Accelerator control handle       |
| 16-0643  | Joystick 4 position              |
| 16-0659  | Switch, 3-pos.                   |
| 16-0657  | Switch, 2-pos. With lock         |
| 16-0669  | Switch, 3-pos. Spring Return (2) |
| 16-0672  | Cover, Switch                    |
| 16-0942  | Symbol, Quick-Couplings          |
| 16-0957  | Symbol, PTO Rear                 |
| 16-0960  | Symbol, PTO                      |
| 16-1524  | Relay 12V 4-pole (switch over)   |
| 16-1530  | Holder relay and clip            |
| 16-1552  | Controller                       |
| 16-9953  | diode                            |
| 16-1534  | Potential meter                  |
| 14-9901  | Potential control knob           |
| 14-9902  | Potential control knob           |
| 14-9903  | Potential control knob           |
| 14-9904  | Potential control knob           |



### 1.6 Exterior

 
16-2170



16-2172

16-2176  
16-2162 LED

52-2705

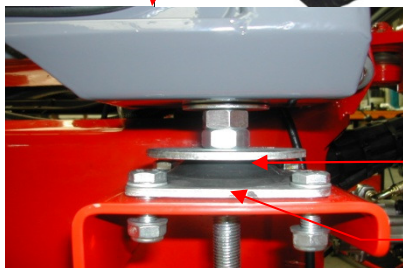


14-9979

14-1503

04-7635

 04-7633

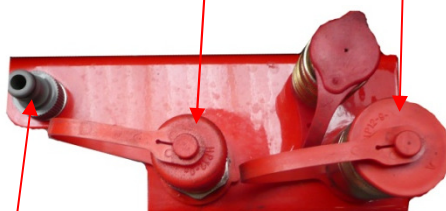

04-7544

04-7542

04-7546

04-7548

12-9915




| Partcode | Disription                         |
|----------|------------------------------------|
| 04-7544  | Quick coupling female 1/2"         |
| 04-7546  | Dust cap 1/2"                      |
| 04-7542  | Quick coupling male 1/2"           |
| 04-7544  | Quick coupling female 1/2"         |
| 04-7548  | Dust cap red male 1/2              |
| 04-7546  | Dust cap red female 1/2            |
| 04-7570  | Dust cap red male 3/4              |
| 04-7572  | Dust cap red female 3/4            |
| 04-7633  | Quick coupling female 3/4          |
| 04-7635  | Quick coupling male 3/4            |
| 04-7643  | Dust cap green male 1/2            |
| 04-7640  | Dust cap green female 1/2          |
| 04-7644  | Dust cap yellow male 1/2           |
| 04-7641  | Dust cap yellow female 1/2         |
| 04-7645  | Dust cap bleu male 1/2             |
| 04-7642  | Dust cap bleu female 1/2           |
| 12-9915  | Water quick coupling               |
| 14-1503  | Vibration silencer (Cabin 4x)      |
| 14-2745  | Screen-washer hose                 |
| 14-2754  | Screen-washer hose connector       |
| 16-2176  | Working light (front and back)     |
| 16-2162  | Working light (front and back) LED |
| 16-2150  | Rotation light (flexible) 12V LED  |
| 14-9979  | Sheet-metal ring M16               |



## 2 Hydraulics
 
### 2.1 Pumps


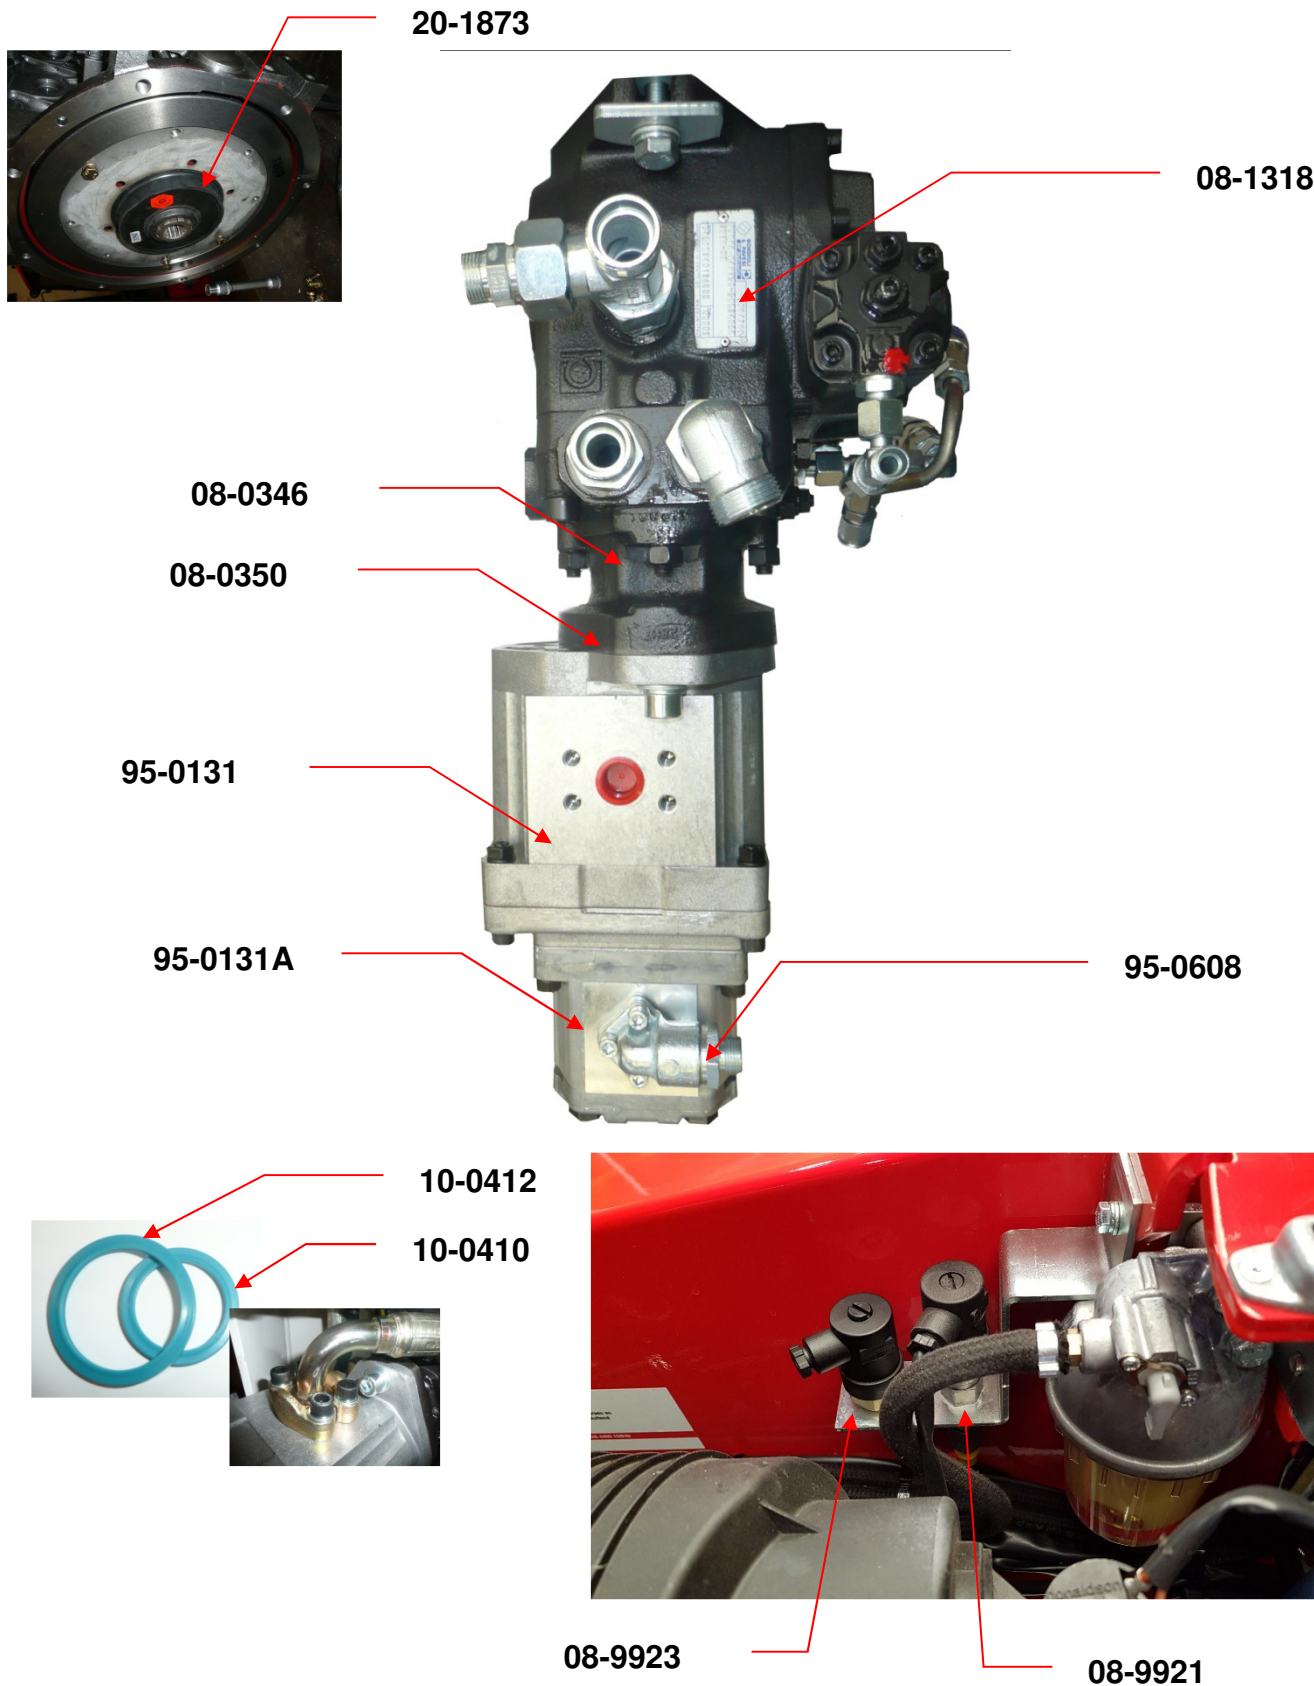




| Partcode | Disription                                              |
|----------|---------------------------------------------------------|
| 04-6918  | Measurement point coupler                               |
| 04-6915  | Measurement point coupler                               |
| 04-6906  | Measurement point coupler                               |
| 08-1318  | Driving-pump DM-Trac                                    |
| 08-0403  | Scavenging valve                                        |
| 08-9921  | Pressure switch IP 30-350 bar Brake light               |
| 08-9923  | Pressure switch IP 0-2 bar Backing light cruise control |
| 08-0346  | SAE flange with fill pump                               |
| 08-0350  | Sealing ring                                            |
| 10-0410  | Sealing ring                                            |
| 10-0412  | Sealing ring                                            |
| 20-1873  | Coupling Engine/Pump                                    |
| 09-0131  | Gear pump 26cc/8cc complete (PTO)                       |
| 09-0131A | Gear pump 8cc (steering)                                |
| 95-0608  | Pump flange 2x                                          |
| 09S-0131 | Sealkit gearpump 09-0131                                |




### 2.2 Functions Implement and Front-lift

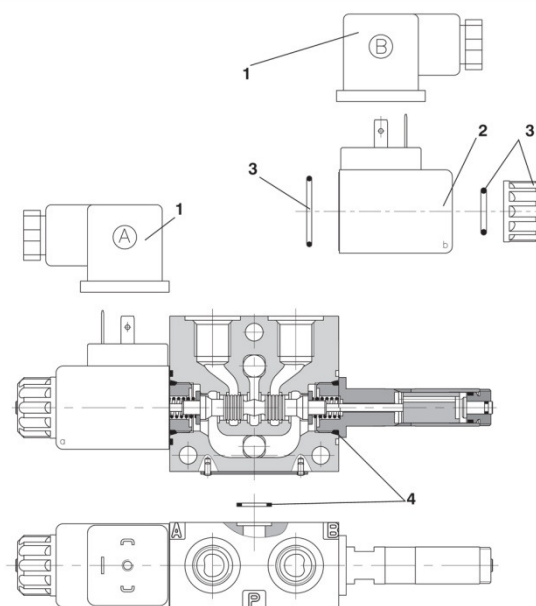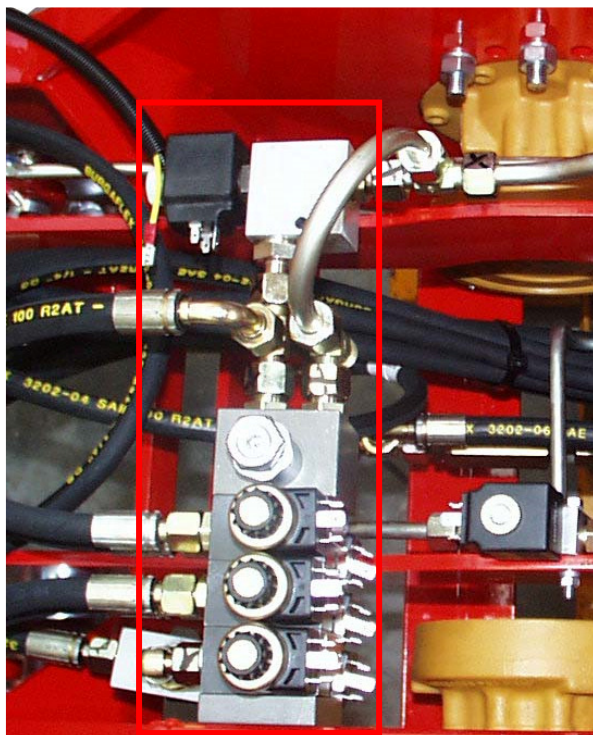  

08-1219-1

08-1217

 08-2302

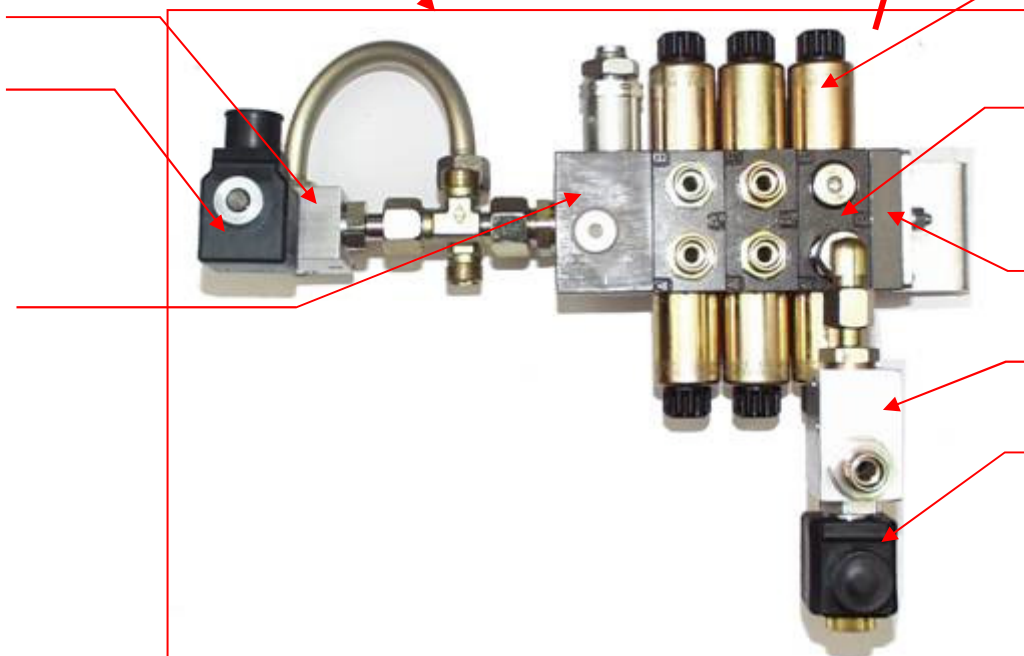

08-2298

08-2300

08-2303

08-1218-1


08-1217



| <b>Partcode</b> | <b>Disription</b>                 |
|-----------------|-----------------------------------|
| 08-1217         | Coil 2/2 valve 12VDC              |
| 08-1218-1       | Valve 2/2 NC 12VDC (front lift)   |
| 08-1219-1       | Valve 2/2 NO 12VDC                |
| 08-2298         | Coil Valve NG3 12VDC              |
| 08-2300         | Valve 4/3 12VDC NG3               |
| 08-2302         | Mounting plate incl. relief valve |
| 08-2303         | Endplate Valve NG3                |
| 14-9939         | Horn                              |



### 2.3 PTO Implement

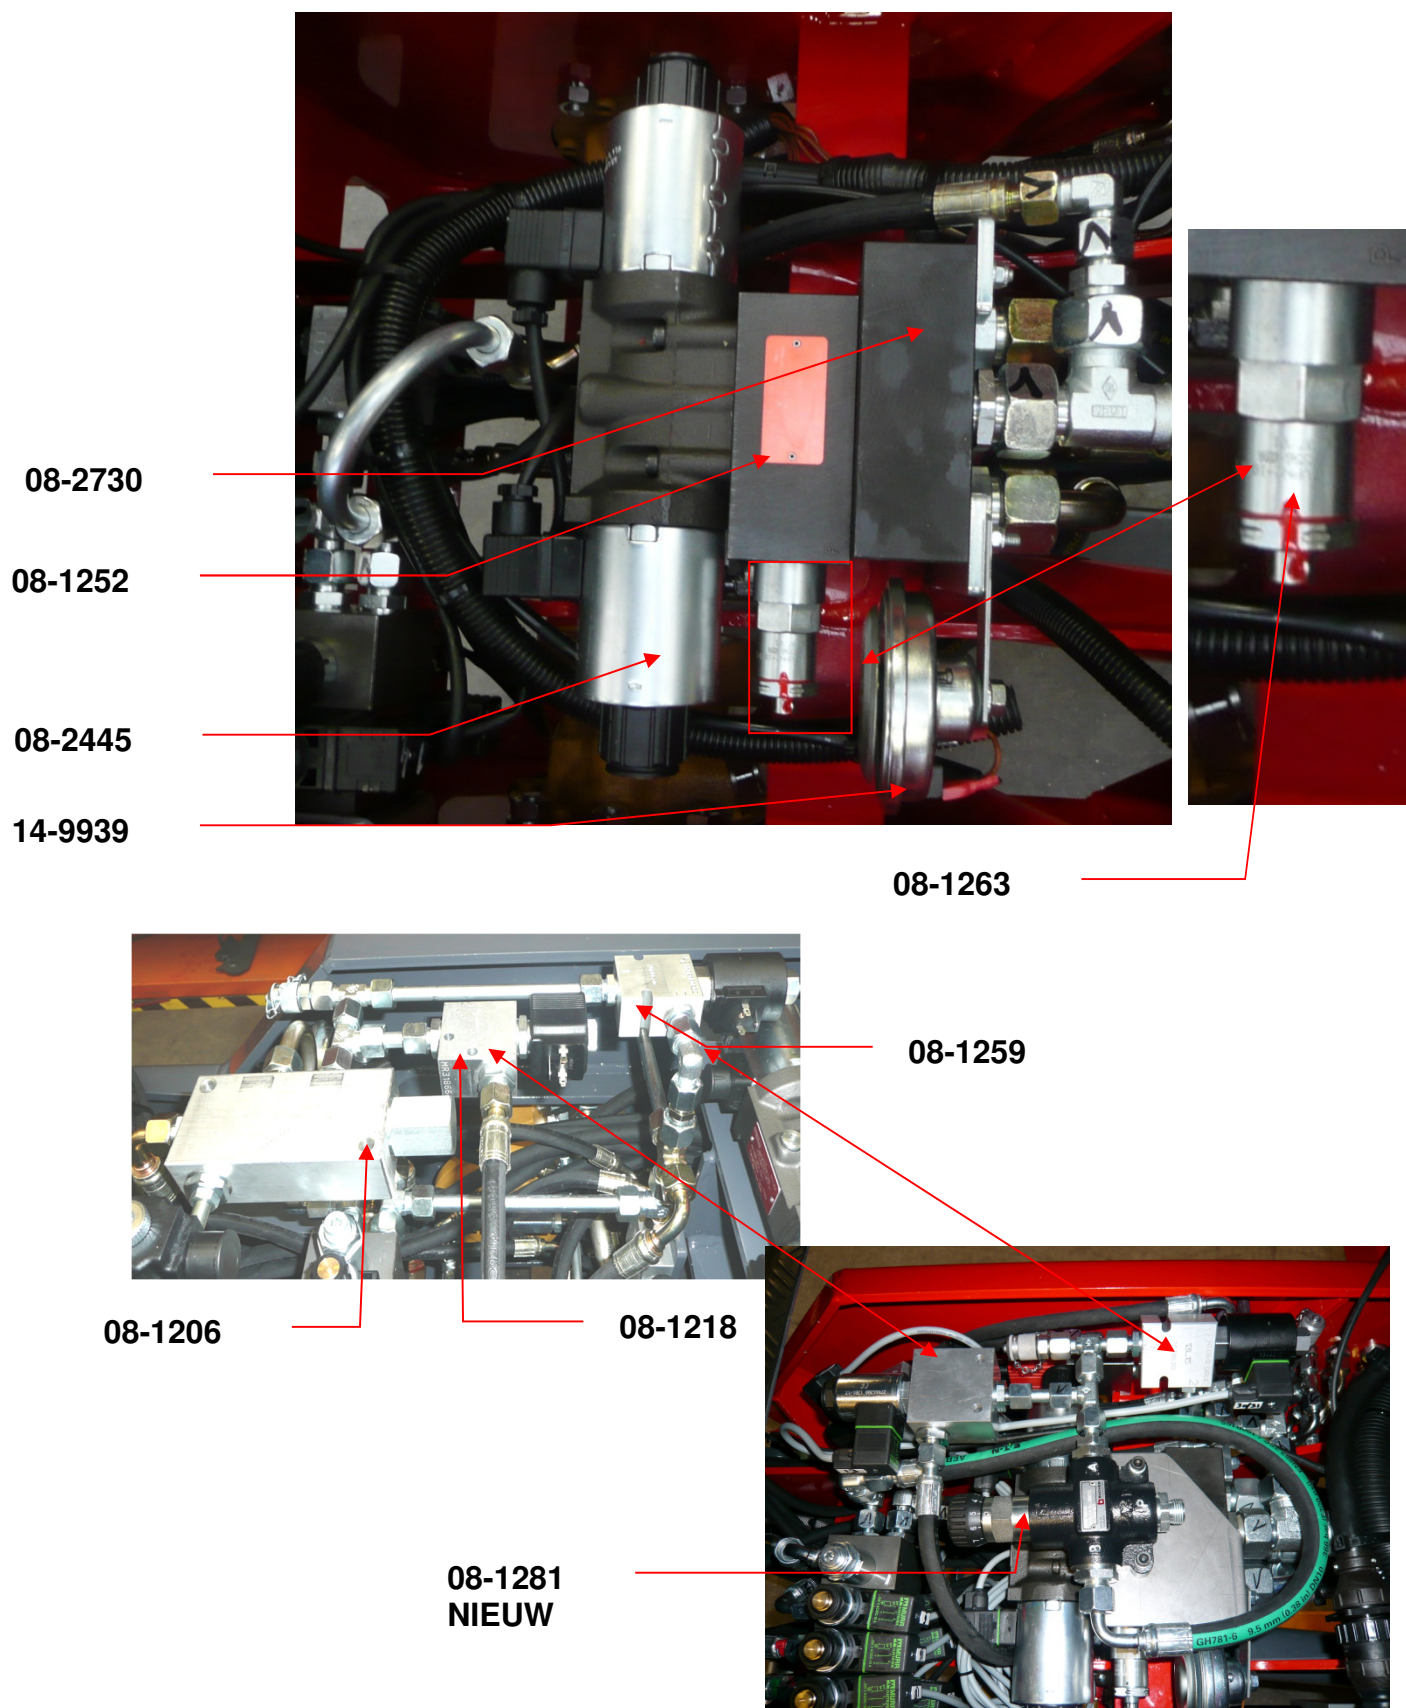 




| Partcode | Disription                                |
|----------|-------------------------------------------|
| 08-1206  | Proportioning valve                       |
| 08-1218  | 2/2 valve                                 |
| 08-2445  | Valve 4/3 12VDC NG10 (PTO)                |
| 08-1252  | Coil Valve NG10 12VDC                     |
| 08-1263. | Cartridge for 08-1252                     |
| 08-2730  | Mounting plate valve NG10                 |
| 08-1248  | Pressure valve                            |
| 08-1259  | Pressure reducing valve (ground pressure) |
| 14-9939  | Horn                                      |
|          |                                           |



## 2.4 Steering System

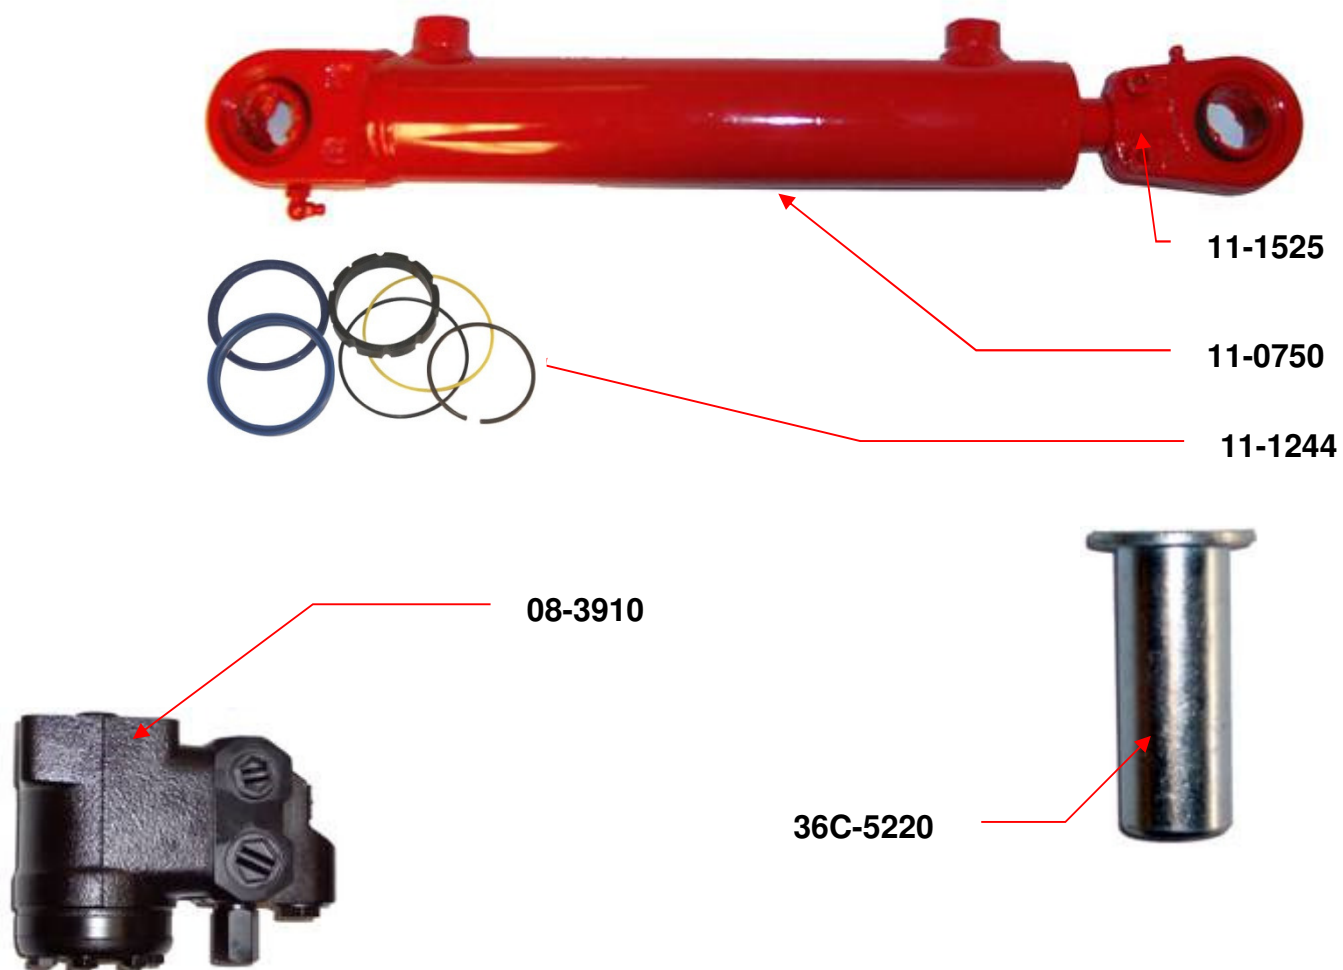 




| Partcode | Disription                    |
|----------|-------------------------------|
| 08-3910  | Orbitrol OSPC 125LS+Prio      |
| 11-0750  | Steering cylinder DM-Trac 215 |
| 11-1244  | Seal kit cylinder 25/50       |
| 11-1525  | Ball joint end 20mm           |
| 36C-5220 | Pin ø30mm pitching            |



### 2.5 Driving System

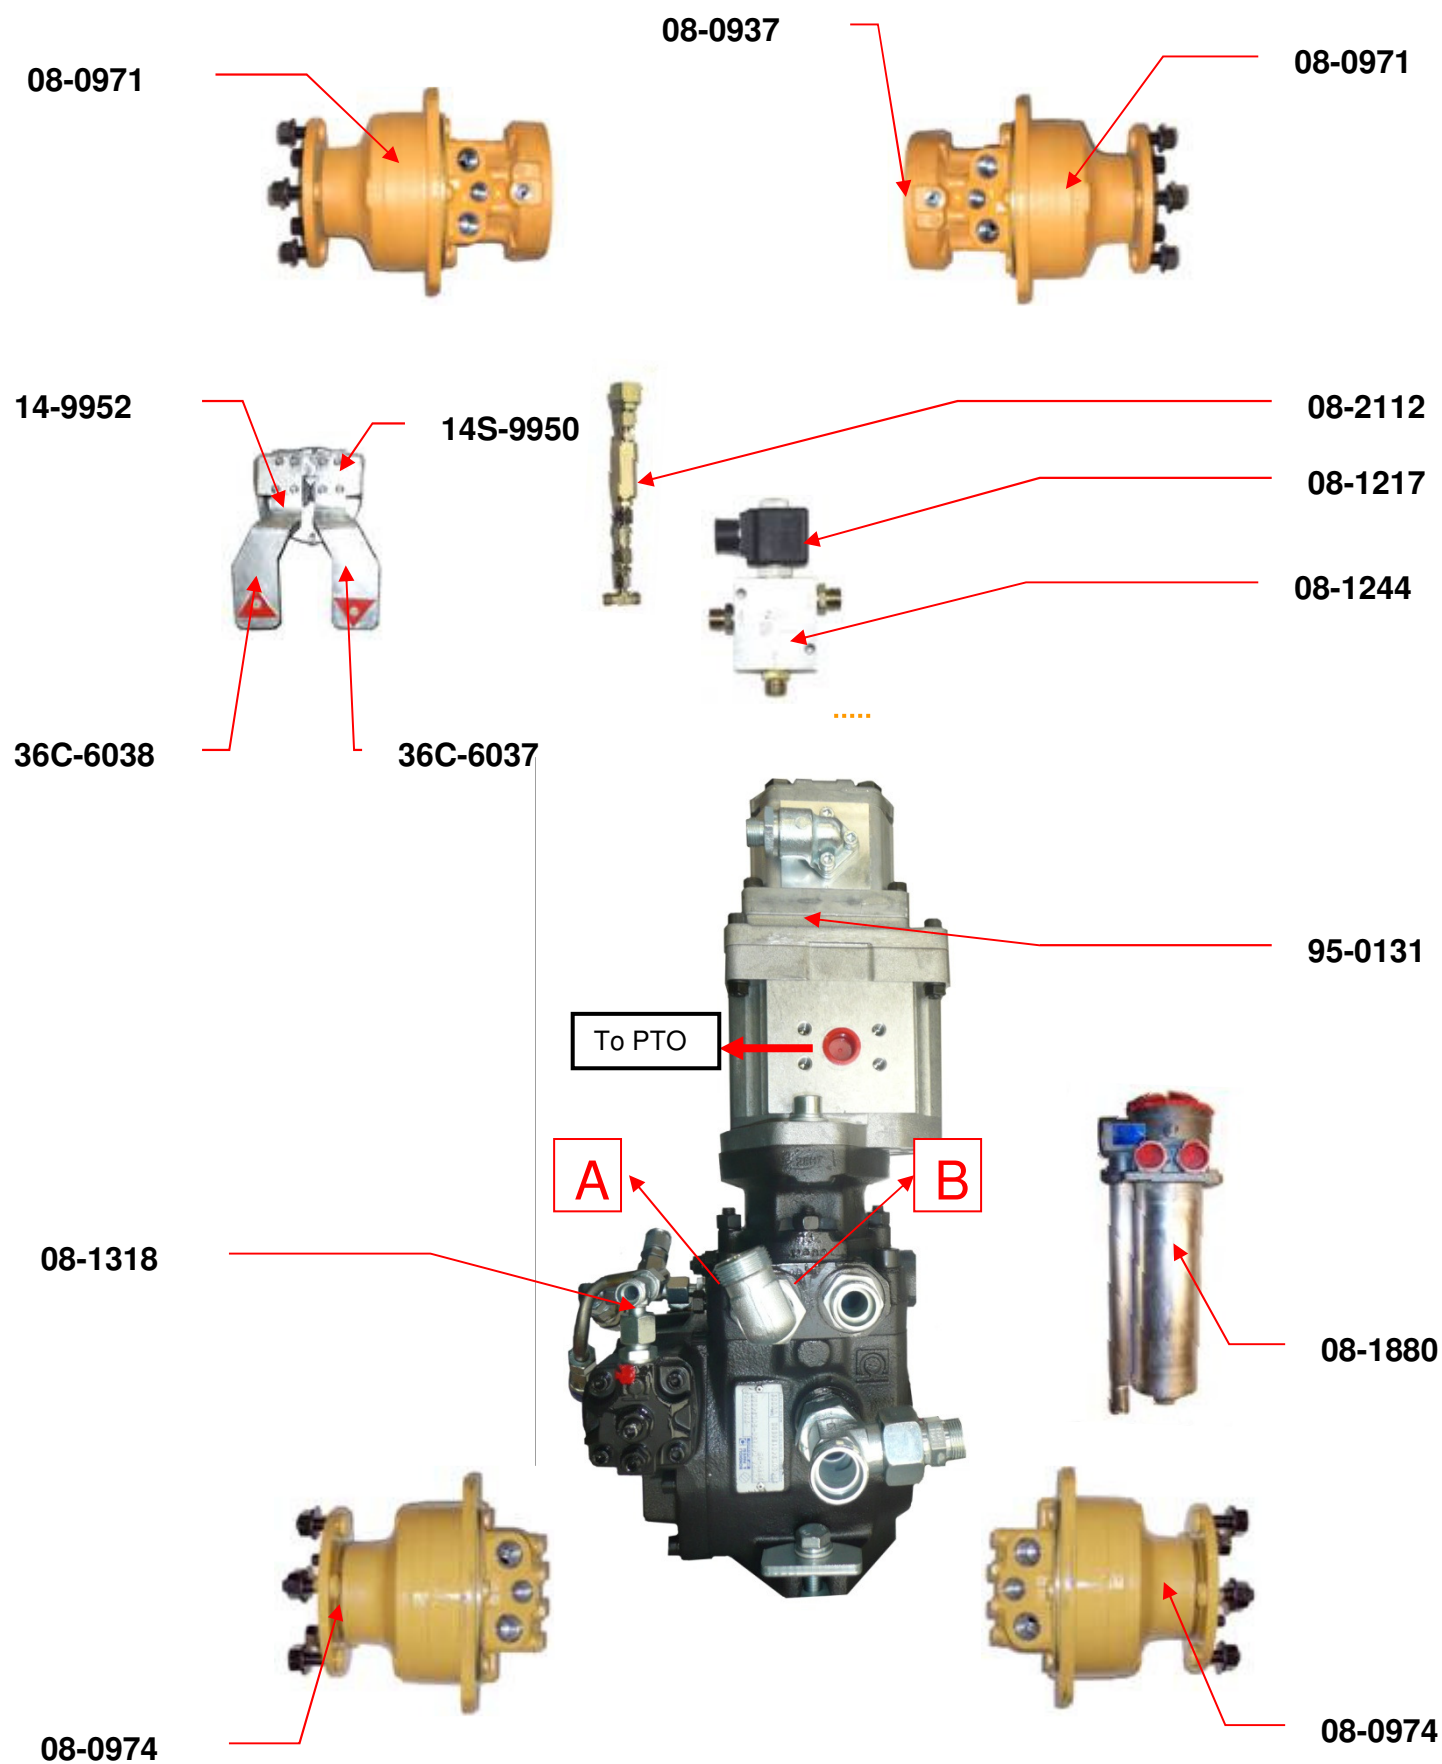 



| <b>Partcode</b> | <b>Disription</b>                      |
|-----------------|----------------------------------------|
| 08-1318         | Driving-pump DM-Trac                   |
| 08-0971         | Weel-motor front DM-Trac 205           |
| 08-0974         | Weel-motor rear DM-Trac 205            |
| 08-1217         | Coil 2/2 valve 12VDC                   |
| 08-1244         | Valve 3/2 12VDC (brake system)         |
| 08-1880         | Hydraulic filter (suction/return)      |
| 08-2112         | Check valve                            |
| 14-9952         | Driving pedal DM-Trac                  |
| 95-0131         | pump 25cc /6cc(PTO)Complete            |
| 14S-9950        | Bracket for driving pedal left / right |
| 36C-6038        | Driving pedal left side                |
| 36C-6037        | Driving pedal right side with ADP      |
| 08-0937         | Seal kit for wheel-motor with brake    |



### 3 Reservoirs and Cooling

#### 3.1 Hydraulic-oil tank

 


08-3621



08-1885

08-1880

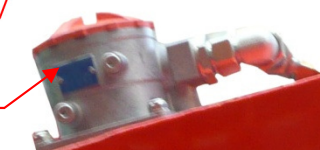

08-4812

08-4506






| <b>Partcode</b> | <b>Disription</b>                 |
|-----------------|-----------------------------------|
| 08-1880         | Hydraulic filter (suction/return) |
| 08-1885         | Hydraulic filter element          |
| 08-3621         | Temperature switch oil-tank       |
| 08-4506         | Gauge glass                       |
| 08-4812         | Filler/Breather filter 7 mu       |



### 3.2 Oil-Cooler

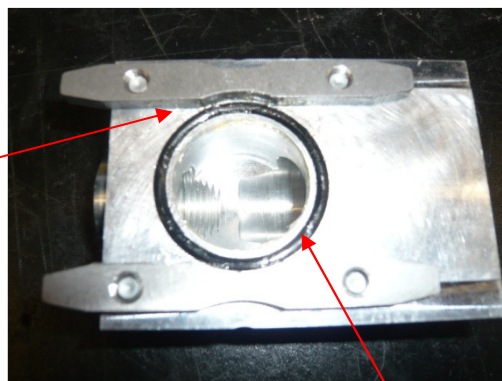 

08S-3610

10-0344





---

| Partcode | Disription             |
|----------|------------------------|
| 08-3611  | Oil-cooler DM-Trac 205 |
| 08S-3610 | Cooler fin for 08-3611 |
| 10-0344  | Sealing ring           |



### 3.3 Fuel tank and Battery

 




| <b>Partcode</b> | <b>Disription</b>        |
|-----------------|--------------------------|
| 08-4804         | Breather filler TR2      |
| 16-9944         | Battery-terminal clamp - |
| 16-9946         | Battery-terminal clamp + |
| 16-9939         | Battery 12V 62 Ah        |
| 20-0312         | Rain cap                 |
| 20-9939         | Tank transmitter         |
| 22-0941         | Striping                 |




### 4 Engine compartment

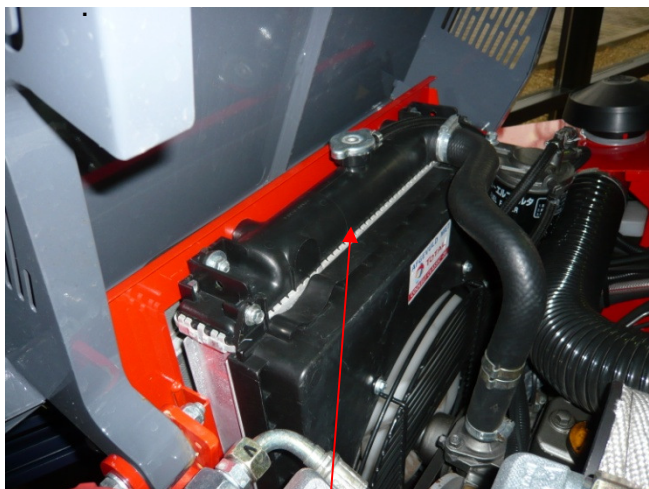

20-4844

 20-1766

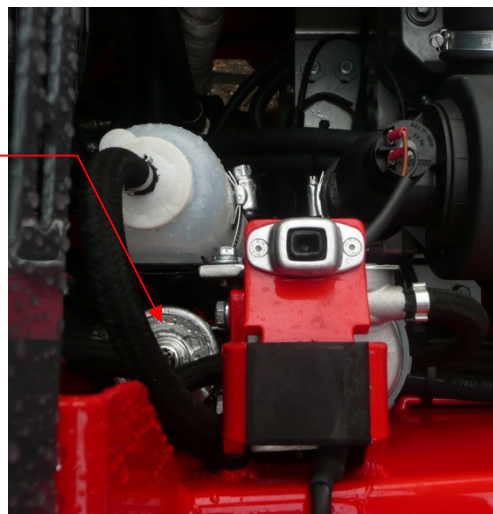

20-0312

20-0954

20-1214

20-9930

 
20-4841



20-0645

20s-0334


20-0334

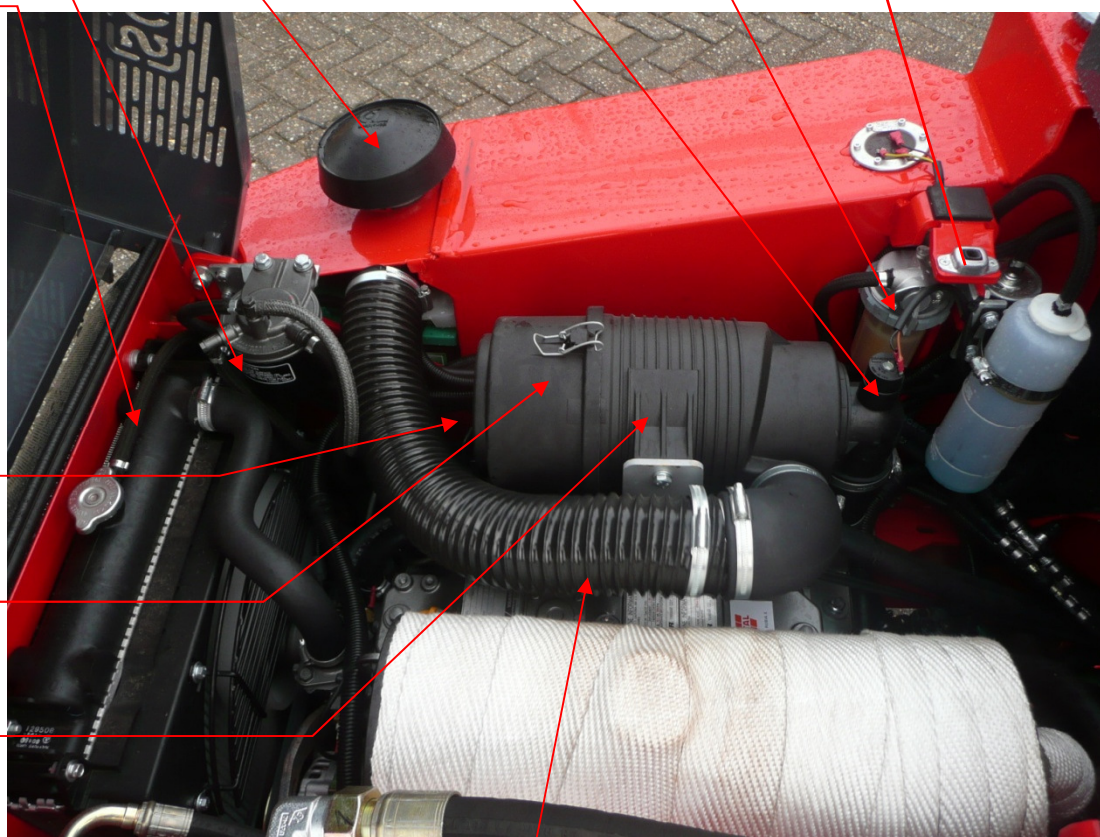

20-3072




| <b>Partcode</b> | <b>Disription</b>      |
|-----------------|------------------------|
| 20-0645         | Air filter cartridge   |
| 20-1766         | Fuel pump              |
| 20-3009         | Fuel hose RM 8         |
| 20-3036         | Water hose 16mm        |
| 20-3080         | Air hose 76mm          |
| 20-1214         | Fuel filter            |
| 20-0334         | Air filter complete    |
| 20S-0334        | Filter cover rear-end  |
| 20-0312         | Rain cover air inlet   |
| 20-0954         | Water fuel filter      |
| 20-3072         | Air filter hose        |
| 20-9930         | Air flow sensor        |
| 20-0918         | Motor oil filter       |
| 20-4841         | Fan Radiator           |
| 20-4844         | Radiator-big fin space |

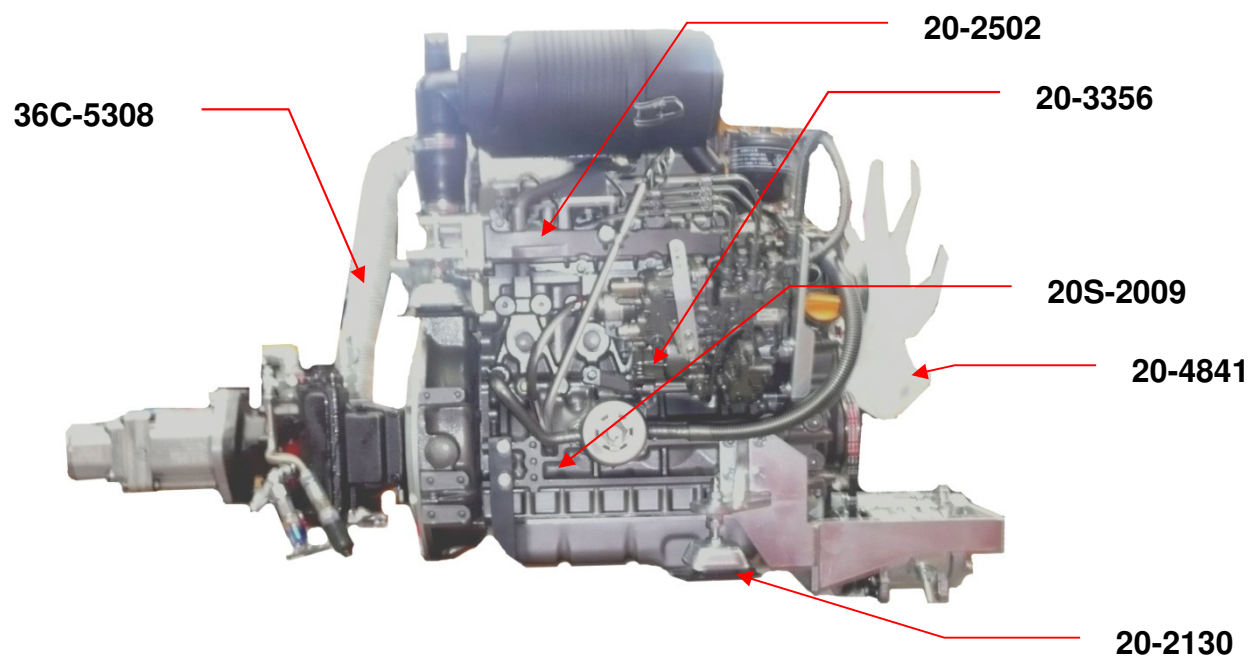 


20-8009



 20-2130

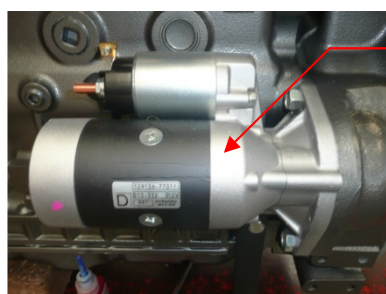


20-3911

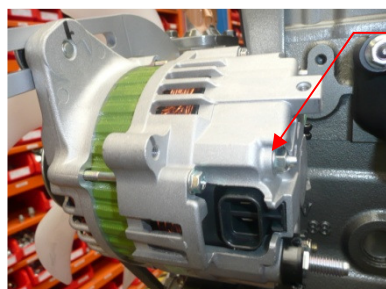 

20-4217




| Partcode | Disription                |
|----------|---------------------------|
| 20-2130  | Vibration damper (engine) |
| 20-2502  | Muffler Yanmar            |
| 20-3356  | Engine Yanmar 4TNV88      |
| 20-4217  | Generator 80A Yanmar      |
| 20-4841  | Fan radiator              |
| 36C-5308 | Exhaust pipe DM-trac 205  |
| 20-2485  | Gasket exhaust pipe       |
| 20-1873  | Motor/pump coupling       |
| 20-4844  | Radiator                  |
| 20-3911  | Engine starter            |
| 20-8009  | Oil pressure sensor       |
| 20-9960  | Gasket thermostat         |
| 20-9970  | Thermostat Yanmar         |
| 20S-2009 | Engine-oil level stick    |

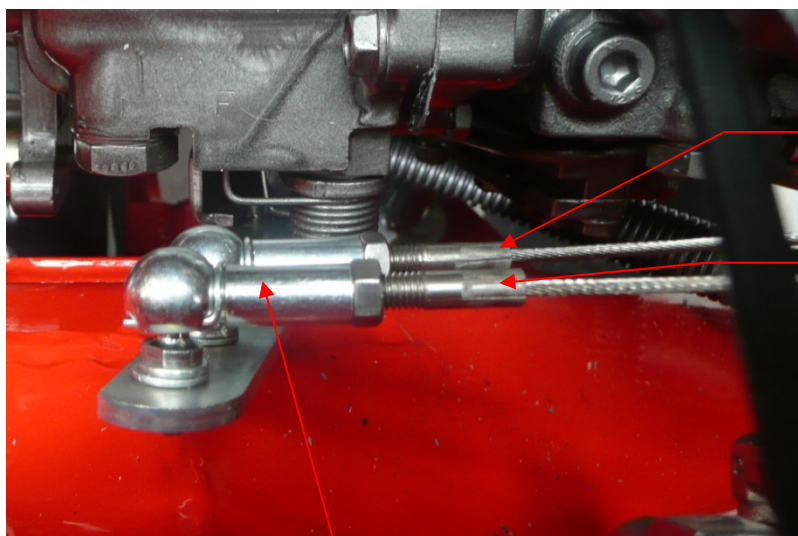 

18-0467

18-0469

 18-1203

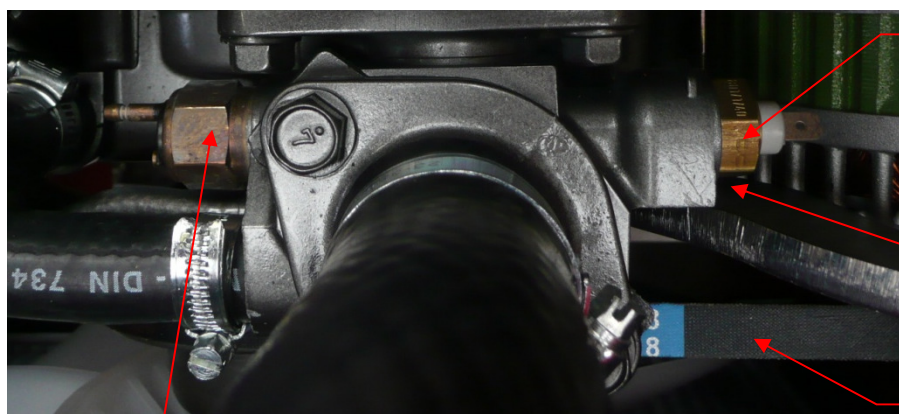

20S-8007

20-1556

20S-3048

16-4252 300A

16-4235 50A





| <b>Partcode</b> | <b>Disription</b>        |
|-----------------|--------------------------|
| 18-0468         | Accelerator cable (hand) |
| 18-0469         | Accelerator cable (foot) |
| 18-1203         | Coupling ball M5         |
| 20S-8007        | Water temperature sensor |
| 20-1556         | V-belt Yanmar            |
| 20S-3048        | Water sensor max.        |
| 16-4235         | Fuse 50Amp (4x)          |
| 16-4252         | Fuse 300Amp (1x)         |



### 5 Chassis

#### 5.1 Chassis Front and Front-lift



14-9985

 
08-0971

38-1215

38-0685 or  
38-0686

36C-5621A

11-0648HP

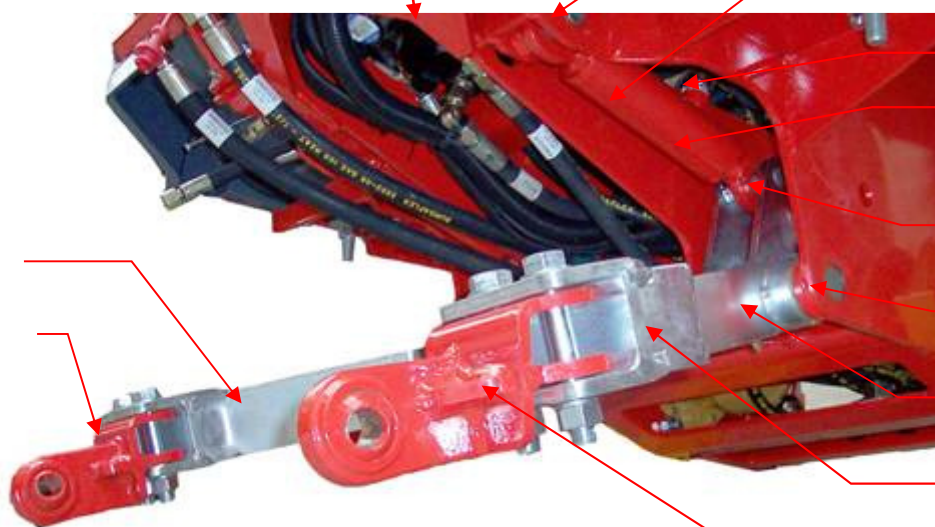

36C-6600R

36C-5605R

11-1803

11-1250

36C-5621A

36C-5621B

30-0912

36C-6600L

36C-5605L

36C-6002



34-9951

34-9952




| Partcode  | Disription                      |
|-----------|---------------------------------|
| 08-0971   | Wheel-motor front DM-Trac 205   |
| 11-0648HP | Frontlift cylinder DM-Trac 205  |
| 11-1250   | Sealkit for 11-0648             |
| 11-1803   | Air-breather filter             |
| 14-1503   | Vibration damper (Cabin)        |
| 14-9985   | Protection boot                 |
| 30-0912   | Sliding bearing                 |
| 34-9951   | Ball for trailer coupling       |
| 34-9952   | Bush for trailer coupling       |
| 36C-6002  | Trailer coupling                |
| 36C-5605L | Coupler A-frame L               |
| 36C-5605R | Coupler A-frame R               |
| 36C-5621A | Pin ø20 mm lift-arm DM-Trac 205 |
| 36C-5621B | Pin ø30 mm lift-arm DM-Trac 205 |
| 36C-6600L | Liftarm L DM-Trac 205           |
| 36C-6600R | Liftarm R DM-Trac 205           |
| 38-1215   | Wheel nut M14 x 1,5             |
| 38-0685   | Tire 26 x 12.0-12 4ply/ ET-45   |
| 38-0686   | Tire 26 x 12.0-12 8ply/ ET-45   |
| 38S-0685  | Rim for 38-0685 and 38-0686     |
| 08-2137   | Reducering valve                |



**38-2427**

 **24-2489**

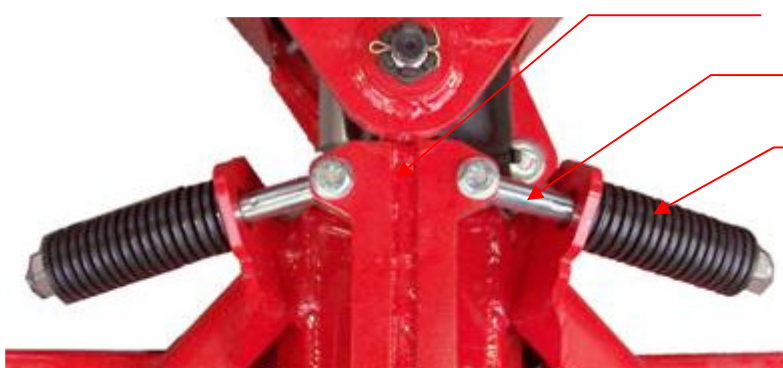

**34-9957**

**36C-5185**

**24-3370**



| <b>Partcode</b> | <b>Disription</b>          |
|-----------------|----------------------------|
| 24-3370         | Disk-spring torsion system |
| 24-2489         | Nut                        |
| 36C-5185        | Pin stability DM-Trac 205  |
| 36C-5220        | Pin ø30mm pitching         |
| 34-9957         | Shackle                    |



### 5.2

### Chassis Rear

 




| <b>Partcode</b> | <b>Disription</b>             |
|-----------------|-------------------------------|
| 08-0974         | Wheel-motor rear DM-Trac 204  |
| 20-0312         | Rain-cap 76mm                 |
| 36C-5104        | Cap oilcooler DM-Trac 205     |
| 36C-5145        | Grill oilcooler DM-Trac 205   |
| 38-1215         | Weel nut M14 x 1,5            |
| 38-0685         | Tire 26 x 12.0-12 4ply/ ET-45 |
| 38-0686         | Tire 26 x 12.0-12 8ply/ ET-45 |
| 38S-0685        | Rim                           |
| 38-0925         | Mudguard                      |
| 16-9974         | Mass switch                   |
| 99-5416         | Key mass switch               |



### 5.3 Chassis back

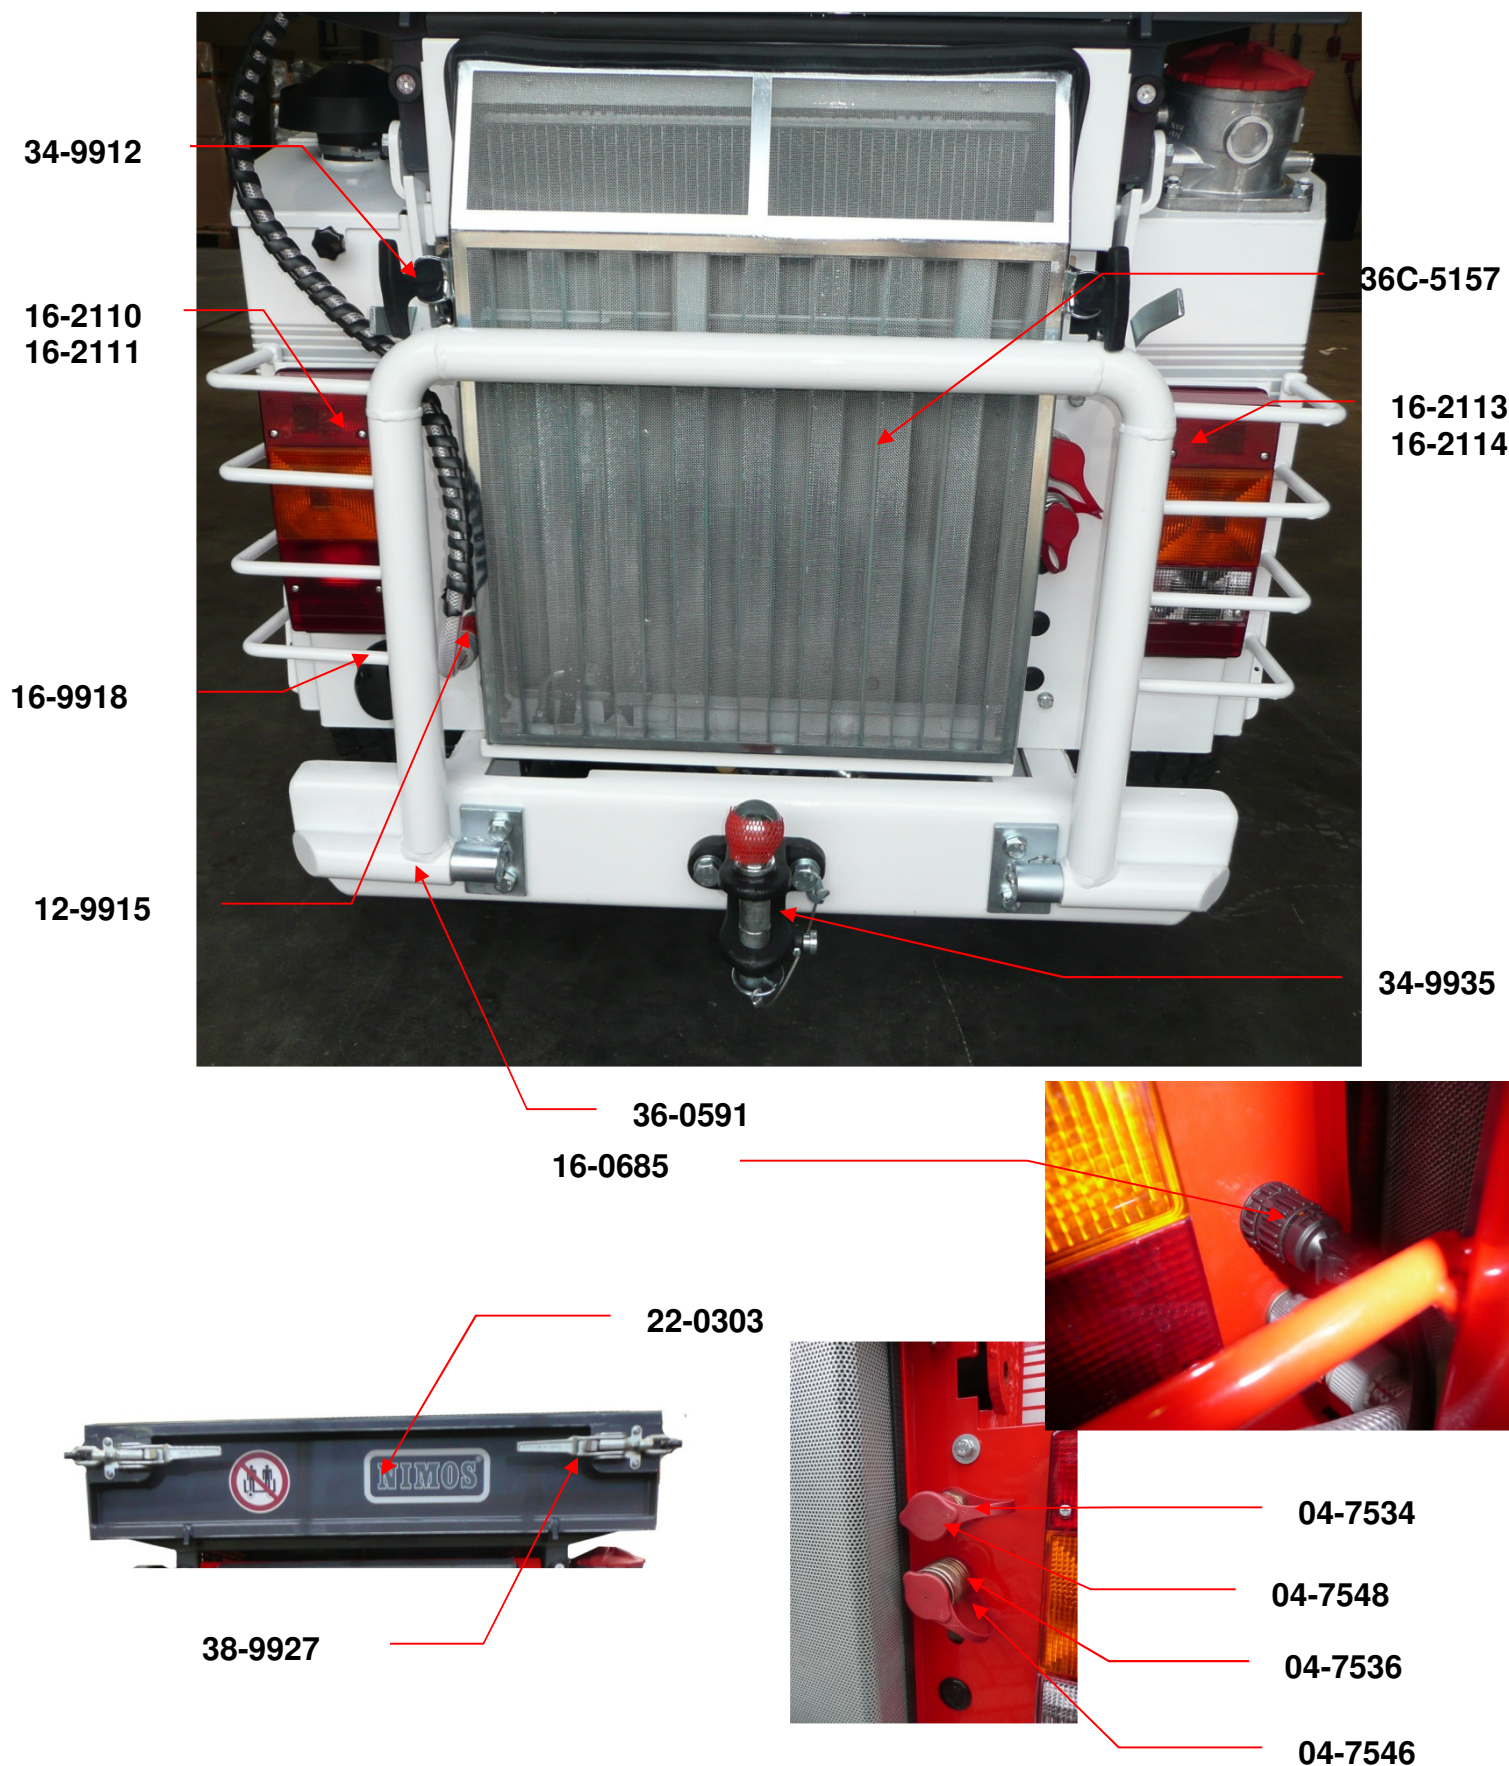



| Partcode | Disription                      |
|----------|---------------------------------|
| 04-7534  | Quick coupling male 1/2"        |
| 04-7536  | Quick coupling female 1/2"      |
| 04-7546  | Dust plug 1/2                   |
| 04-7548  | Dust cap 1/2                    |
| 11-9915  | Attaching nipple washer         |
| 16-2110  | Rear-combination light L        |
| 16-2111  | Rear-light cover Left           |
| 16-2113  | Rear-combination light R        |
| 16-2114  | Rear-light cover Left           |
| 16-9918  | Coupling plug 7pole (ligh)      |
| 20-2106  | Damper body                     |
| 20-9921  | 12v connecting                  |
| 22-0303  | Sticker Nimos                   |
| 34-3910  | Lock for tipping-box            |
| 34-9912  | Hood closure                    |
| 34-9935  | Rear coupling                   |
| 36C-5150 | Grill Radiator DM-Trac 205      |
| 38-9927  | Lock                            |
| 36-0591  | Bull bar for Dm-trac 205(optie) |
| 16-0685  | 12v connecting                  |




### 5.4 A-Frame

 34-0324

36C-5660

52-2705

34-0324

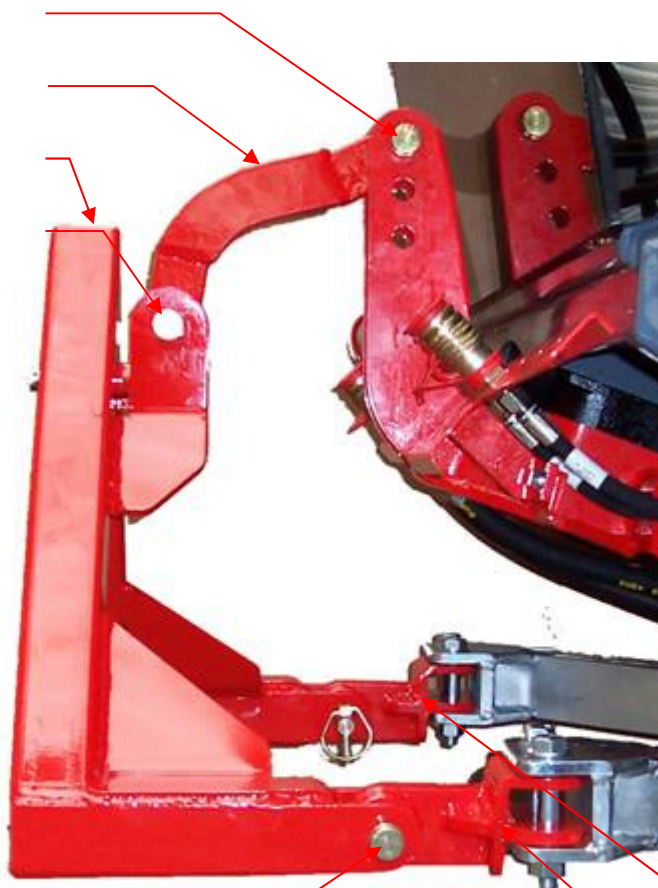

34-0327

36C-5605R

36C-5605L



| <b>Partcode</b> | <b>Disription</b>   |
|-----------------|---------------------|
| 34-0324         | Top link pin 19mm   |
| 34-0327         | Top link pin 22mm   |
| 52-2705         | A-frame 205 Comfort |
| 36C-5660        | Top link A-frame    |




### 6 Options



 36-0589

12-9925

12-9973

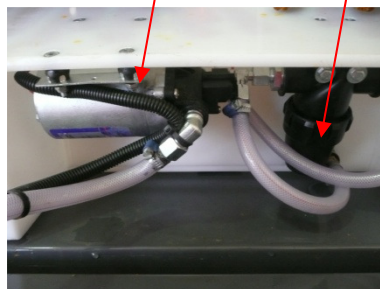

14-3310


16-2176



36-0579



| <b>Partcode</b> | <b>Disription</b>              |
|-----------------|--------------------------------|
| 12-9925         | Washer pump OKB                |
| 14-3303         | Mirror                         |
| 14-3310         | Drive rearward camera complete |
| 16-2176         | Working light                  |
| 16-9962         | Drive rearward alarm           |
| 36-0579         | Mud flap                       |
| 36-0589         | Lager system segmenting        |
| 36-0626         | Hydraulics dump complete       |
| 36-5603R        | Mirror brace                   |
| 11-0708         | Cylinder                       |
| 12-9973         | Water filter                   |

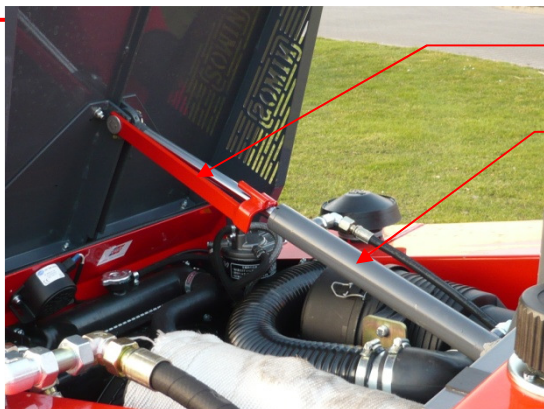 

36-0626

11-0708



36C-5605R

14-3303



16-9962



## 7. Fast Moving Parts

| Partcode | Disription                                |
|----------|-------------------------------------------|
| 08-4812  | Filler/Breather filter 7 mu               |
| 08-1885  | Hydraulic filter element (suction/return) |
| 18-0468  | Accelerator cable (hand)                  |
| 18-0467  | Accelerator cable (foot)                  |
| 20-0645  | Air filter Yanmar                         |
| 20-0638  | Air filter 1102 cabin                     |
| 20-0918  | Oil filter Yanmar                         |
| 20-1214  | Fuel filter Yanmar                        |